

## UNIVERSAL MASSAGER

En bodywand framtagen med kvinnlig kroppsmessage i åtanke. Denna multifunktionella massager är kompakt, tyst och kraftfull och anpassar sig perfekt till alla dina behov. Universal Massager är ergonomisk och enkel att använda, vare sig det är för att massera trötta och stela muskler eller för din intima njutning.

1. LADDNING: För varsamt in laddningskabeln i Universal Massager. Koppla in andra änden (USB) i en strömadapter för USB-laddare eller en USB-port på datorn. En röd lampas tänds medan Universal Massager laddas och släcks sedan när den är fulladdad.

LADDNINGSTID: 90 minuter

KÖRTID: 40 minuter

2. PÅ-/AVSTÄNGNING SAMT VIBRATIONSMENY: För att sätta på vibrationerna håll in knappen två sekunder. Tryck sedan på knappen för att bläddra mellan de 10 olika vibrationslägena. Håll sedan inne knappen två sekunder för att stänga av vibrationerna.

3. UNDERHÅLL: Tvätta noggrant före och efter varje användning med ett desinficerande rengöringsmedel för intim-produkter. Använd endast vattenbaserat glidmedel. Undvik att sänka Universal Massager helt i vatten och undvik att få vatten i laddnings-hålet.

## PRODUKT SPECIFIKATION

- Silikon/ABS
- 1 tyst motor
- 10 vibrationslägen
- Längd: 21 cm
- Ø: 3.7 cm
- Uppladdningsbart integrerat batteri
- Vattentålighet: Stänksäker
- Ftalatfri

## UNIVERSAL MASSAGER

Massager specially made for women's intimate body massages. The multifunction massager is compact, silent and powerful and will adapt perfectly to all your needs. Ergonomic and easy to use. Its multiple vibration modes will be simply ideal to relief muscular tension and to offer a great range of intimate pleasure as well.

1. CHARGE: Insert the charger into the charging socket. Plug into the wall socket or to your computer port through the USB end. A red light will turn on while the product is charging. When it is fully charged, the light will turn off.

FULL CHARGE TIME: 90 min.

APPROXIMATE USE TIME: 40 min.

2. ACTIVATION AND EXPLORATION OF MODES: Press for two seconds the button on the product to move through the 10 vibration modes.


3. DEACTIVATION: Press for a few seconds the button on the product.

4. MAINTENANCE: Wash carefully with neutral soap and water before and after every use. Do not use silicone-based lubricant.

\* It is advisable not to make excessive use under water. Avoid sinking or getting the connections wet.

## TECHNICAL FIXTURES

- Silicone / ABS
- 1 ultra-quiet motor
- 10 vibration modes
- Length: 21 cm
- Ø: 3.7 cm
- Rechargeable battery
- Splash proof
- Phthalates free

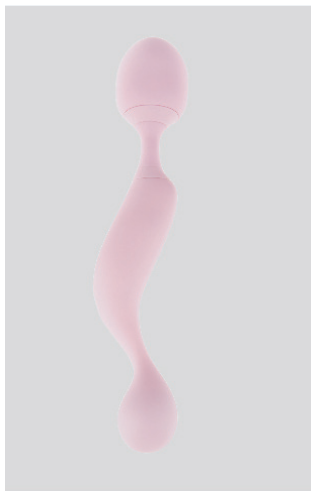

**Representante autorizado:**

CNEX AIE,SL  
C/Mendez Nuñez,49  
08032 Mataró  
BARCELONA-SPAIN  
Tel:+ 34 933 806 526  
Fax: +34 933 806 528

**Distribuerad av:**

Jewa Sweden AB  
[www.jewasweden.se](http://www.jewasweden.se)

[www.femintimate.se](http://www.femintimate.se)



**FEMINTIMATE**  
Universal Massager

