

Tango

BY

WE • VIBE™

Touch

BY


WE • VIBE™

Tango by We-Vibe™

Powerful yet petite

Tango by We-Vibe offers instant intensity and the excitement of powerful vibrations. The narrow edges provide pinpoint external stimulation, while the flat area soothes and stimulates with all-over massage. Amazing on its own, or use it to add power to your favourite silicone pleasure product.

Clitoral
vibration

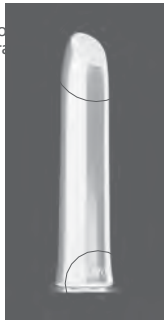

Control button



N 24879



M00229 R1

Touch by We-Vibe™

Silky-soft and sensual

Touch by We-Vibe gently rocks your world with a slow build to a deep and satisfying sensation. Its sculpted shape is designed to be held in your hand. The rounded tip targets your external pleasure points, while the gentle contours hug and stimulate erogenous zones all over your body.

Clitoral
vibration



Control button

GeTTInG sTarTed

You're about to discover a vibe that will tingle your senses, deliver delicious thrills, help you reach new heights of pleasure — and keep you wanting more.

share the vibe with a partner or keep it all to yourself.


1. Charge for 90 minutes before first use.

Attach the magnetic charging cap to your Tango by We-Vibe or Touch by We-Vibe.

Plug the USB cable into the charging cap and into a USB power source:

Charging cap light on: Charging

Charging cap light off: Fully charged (or charging cap is disconnected)

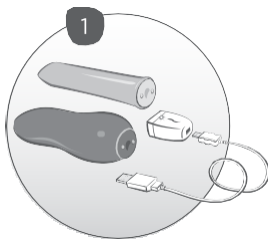

2. Wash your Tango or Touch with soap and water and dry completely.


3. If you desire lubrication, apply a water-based lubricant.

Reminder: Tango by We-Vibe and Touch by We-Vibe are for external use only.



I need moRe help

- Check the frequently asked questions (FAQ) at we-vibe.com.
- e-mail us at customercare@we-vibe.com or complete the web form at we-vibe.com/contact-us-customer-care.
- For information about replacement parts, visit we-vibe.com.

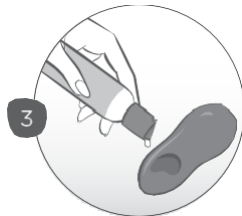

enjoYInG Your TanGo or TouCh

4. To turn on, firmly press and then release the control button.
5. To change the vibration mode, press and release the control button.
6. To turn off, hold the control button down for 2 seconds. or press it repeatedly to move through the vibration modes until you reach the off position.



VIBRATIon modeS

low	)))
medium	))))
high	))))))
Ultra-high	)))))))))
Wave	
Pulse	
Tease	
Cha-cha	

CharGInG and baTTeRY lIfE

- A small light located beside the control button will begin to flash when the battery is low and needs to be recharged.
- Wash and fully dry your intimate massager before recharging.
- Plug the USB cable into a USB port or any USB power adapter (not included), such as one used to charge a mobile phone.
- A full charge takes up to 90 minutes. The light on the charging cap turns off when a full charge is reached.
- When a computer USB port is used, your Tango or Touch will not charge if your computer goes into hibernation mode.
- When a USB hub is used, your Tango or Touch may not charge if that hub is also charging other devices.
- Your Tango or Touch will operate for up to 2 hours on a full charge, depending on the vibration mode. Modes with higher vibration speeds will drain the battery faster.
- There's no need to drain the battery before recharging.
- When your massager is unplugged, the charge is maintained for several months, but will continually diminish over time.

For best performance and long battery life, recharge before vibrations weaken noticeably.

CleanInG and sToraGe

- Clean with gentle soap and water before and after use.
- Store in the original packaging or the bag provided.
- Keep away from extreme heat or cold.

do noT

- Do not use Touch or Tango internally.
- Do not use silicone-based lubricants because they may damage your Touch.
- Do not clean with products that contain alcohol, petrol or acetone.
- Do not boil, bake, microwave or put in a dishwasher.
- Do not store in extreme temperatures.

produCT speCIfICaTions

Tango by We-Vibe

- Exterior material: 100% body-safe PC-ABS thermoplastic; fully waterproof
- Charging system: USB rechargeable
- Charging time: Up to 90 minutes
- Battery: Nickel-metal hydride (NiMH)

- Run time: Up to 2 hours, depending on vibration mode used
- Dimensions of vibrator: 80 mm x 16 mm

Touch by We-Vibe

- Exterior material: 100% medical-grade silicone; fully waterproof
- Charging system: USB rechargeable
- Charging time: Up to 90 minutes
- Battery: Nickel-metal hydride (NiMH)
- Run time: Up to 2 hours, depending on vibration mode used
- Dimensions of vibrator: 100 mm x 45 mm x 30 mm

WarranTY

The one-year warranty covers defective product replacement only. Visit we-vibe.com/warranty for product replacement and warranty information. no other warranties are expressed or implied. If there is a warranty claim, or any other damage, the user's sole remedy is product replacement. no medical claims are implied or warranted by use of this product.

ComplianCe

Tango by We-Vibe and Touch by We-Vibe are rated for indoor use only from +10°C to +35°C.

This class B digital apparatus complies with Canadian ICES-003.

This device complies with part 15 of the FCC Rules. operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tango by We-Vibe: model 0260

Touch by We-Vibe: model 0270

We-Vibe charging cap: model 2134

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. For further compliance information, visit we-vibe.com/support/regulatory-compliance.

responsIble dIsposal

The crossed-out wheeled bin on the product indicates that this product should not be treated as household waste.

electrical and electronic equipment contains hazardous substances that can be harmful to the environment and human health if not disposed of properly. To reduce the impact on the environment, we encourage you to use the appropriate take-back systems when the product has reached end of life. Please contact your local or regional waste administration for details.

Contact us for more information on the environmental performance of our products.

WarnInG

Sold as an adult novelty only; not for medical use and not clinically tested. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities. To avoid electric shock, do not use charger near water. do not use on swollen or inflamed areas of skin. discontinue use if discomfort occurs. do not use on neck area. This product is for external use only.


cuSToMeR SuPPoRT
+1-855-258-6678
+1-613-828-6678
customercare@we-vibe.com

we-vibe.com

Tango by We-Vibe™

Kraftfull och nätt
Tango by We-Vibe ger direkt intensitet och upphetsningen med sina kraftfulla vibrationer. de smala ändarna ger en exakt yttre stimulering, medan det plana området lindrar och stimulerar med övergripande massage. fantastisk på egen hand, eller använd den för att ge extra kraft till din

Klitorisvib

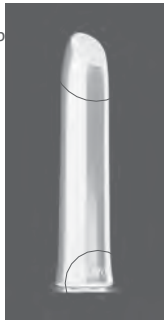

Touch by We-Vibe™

Klitorisvib



Silkeslen och sensuell
Touch by We-Vibe skakar försiktigt
om din värld med en långsam
uppbyggnad till en djup och
tillfredsställande sensation. dess
skulpterade form är designad för
att hållas i handen. den rundade
toppen stimulerar dina externa
njutningspunkter, medan den mjuka
konturen kramar och stimulerar
erogena zoner över hela din kropp.

Kontrollknapp

Komma IGång

du är nu på väg att upptäcka en vibration som kommer att kittla dina sinnen, leverera härliga känslor och hjälpa dig att nå nya höjder av njutning – samt göra att du vill ha mer.

dela med dig av vibrationen med en partner eller behåll den för dig själv för sköna stunder.


1. Ladda under 90 minuter innan första användning.

Fäst det magnetiska laddningslocket till din Tango by We-Vibe eller Touch by We-Vibe.

Anslut USB-kabeln till laddningslocket och till en USB-strömkälla.

Lampa lyser på laddningslock:
Laddar


Lampa släckt på laddningslock:
Fulladdad (eller laddningslock ej anslutet)

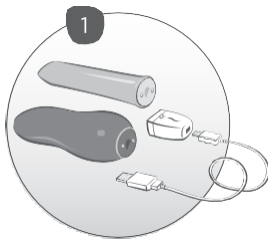

2. Tvätta din Tango eller Touch med tvål och vatten och torka den helt.

3. om ni vill använda glidmedel, applicera ett vattenbaserat glidmedel.

Påminnelse: Tango by We-Vibe och Touch by We-Vibe är endast för externt bruk.

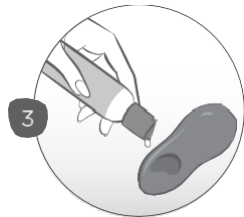

JAG BehöVeR meR hJÄlP

- Läs igenom vanliga frågor och svar på we-vibe.com.
- Skicka e-post till customercare@we-vibe.com eller fyll i webbformuläret på we-vibe.com/contact-us-customercare.
- För information om reservdelar, besök we-vibe.com.

njuTa aV dIn TanGo eLLer TouCh

4. För att slå på, tryck in och släpp kontrollknappen.

5. För att ändra vibrationsläge så trycker du på kontrollknappen och släpper den.

6. För att stänga av trycker du in kontrollknappen under 2 sekunder. du kan även trycka på den upprepade gånger för att gå igenom de olika vibrationslägena till det att du når AV-positionen.



VIBRATIONSLÄGEN

Låg	)))
medel	))))
hög	))))))
Ultrahög	)))))))))
Våg	
Puls	
Retning	
Cha-cha	

Laddning och batteriets livslängd

- En liten lampa bredvid kontrollknappen kommer att börja blinka när batteriet är svagt och behöver laddas.
- Tvätta och torka din intim-massageapparat helt innan laddning.
- Anslut USB-kabeln till en USB-port eller en USB-adapter (medföljer ej), tex en som används för att ladda en mobiltelefon.
- Full laddning tar upp till 90 minuter. Lampan på laddningslocket slocknar när det är fulladdat.
- När du använder en USB-port från en dator så kommer din Tango eller Touch inte att laddas om datorn går till viloläge.
- När en USB-hubb används så kan det hända att din Tango eller Touch inte laddar om hubben även laddar andra apparater.
- Din Tango eller Touch fungerar upp till 2 timmar på en full laddning, beroende på vibrationsläget. Lägen med högre vibrationshastigheter kommer att tömma batteriet snabbare.
- Man behöver inte tömma batteriet innan det laddas upp.
- När din massageapparat inte är inkopplad så kommer laddningen att hålla flera månader men att försvagas med tiden.

För bästa prestanda och batterilivslängd bör den laddas upp innan vibrationerna märkbart försvagas.

renGörInG oCh förVarInG

- Tvätta med mild tvål och vatten före och efter användning.
- Förvara i originalförpackning eller i den medföljande påsen.
- Håll den borta från extrem värme eller kyla.

Gör InTe

- Använd inte Touch eller Tango internt.
- Använd inte silikonbaserade glidmedel då dessa kan skada din Touch.
- Rengör inte med produkter som innehåller alkohol, bensin eller aceton.
- Koka den inte eller placera den i en ugn, mikrovågsugn eller diskmaskin.
- Förvara inte vid extrema temperaturer.

produKtspeCifikationer

Tango by We-Vibe

- Yttermaterial: 100 % kroppssäker PC-ABS termoplast; helt vattentät
- Laddningssystem: Kan laddas från USB
- Laddningstid: Upp till 90 minuter
- Batteri: Nickelmetallhydrid (NiMH)
- Drifftid: Upp till 2 timmar, beroende på vilket vibrationsläge som används
- Vibratorns mått: 80 mm x 16 mm

Touch by We-Vibe

- Yttermaterial: 100 % silikon av medicinsk grad; helt vattentät
- Laddningssystem: Kan laddas från USB
- Laddningstid: Upp till 90 minuter
- Batteri: Nickelmetallhydrid (NiMH)
- Drifftid: Upp till 2 timmar, beroende på vilket vibrationsläge som används
- Vibratorns mått: 100 mm x 45 mm x 30 mm

GaranTi

ett års garanti täcker endast ersättning av defekt produkt. Besök we-vibe.com/warranty för ersättning av produkt och garantiinformation. Inga andra garantier uttrycks eller underförstås. Vid garantianspråk eller annan typ av skada så kan användaren endast erhålla en ersättningsprodukt. Inga medicinska anspråk underförstås eller garanteras vid användning av denna produkt.

öVerensstämMelse

Tango by We-Vibe och Touch by We-Vibe är klassade för endast inomhusbruk från +10°C till +35°C.

denna klass B digitala apparat uppfyller ICeS-003 i Kanada.

denna apparat uppfyller kraven i del 15 i FCC-reglerna. Användning styrs av följande två villkor: (1) denna apparat får inte orsaka skadliga störningar och (2) denna apparat måste acceptera alla mottagna störningar, inklusive störningar som kan orsaka oönskad funktion.

Tango by We-Vibe: modell 0260

Touch by We-Vibe: modell 0270

We-Vibe laddningslock: modell 2134

Ändringar eller modifikationer som inte godkänts uttryckligen av den ansvariga parten för överensstämmelse kan upphäva användarens behörighet att använda utrustningen. För vidare information om överensstämmelse besök we-vibe.com/support/regulatory-compliance.

ansVarsfull KasserInG

den överkorsade soptunnan på produkten indikerar att denna produkt inte får hanteras som hushållsavfall.

elektrisk och elektronisk utrustning som innehåller farliga ämnen som kan skada miljö och hälsa om den inte kasseras på rätt sätt. För att minska miljöpåverkan så rekommenderar vi att du använder lämpliga återvinningssystem när produkten nått slutet av sin livslängd. Vänligen kontakta er lokala

eller regionala myndighet för avfallshantering för detaljer.

Kontakta oss för mer information om miljöprestanda gällande våra produkter.

VarnInG

Säljs endast som en nymodighet för vuxna; ej för medicinskt bruk och ej kliniskt testad. denna apparat är inte avsedd för barn eller personer med nedsatta fysiska, sensoriska eller mentala förmågor. För att undvika elchock så ska laddaren inte användas i närheten av vatten. Använd inte på svullna eller inflammerade områden på huden. Avbryt användande om obehag uppstår. Använd inte runt nacken. denna produkt är endast till för externt bruk.

KunDSuPPoRT
+1-855-258-6678
+1-613-828-6678
customercare@we-vibe.com

we-vibe.com

designed and developed by
Standard Innovation Corporation, Canada.

made in China.

© 2013 Standard Innovation® Corporation

We-Vibe and the We-Vibe logo are trademarks of
Standard Innovation Corporation.

For information on patents, designs and pending patent
and design applications in the United States, Canada, europe,
Australia, Brazil, China, hong Kong, India, Japan, Korea
and mexico, see we-vibe.com/patents.

we-vibe.com