


Elevate Monitor Arm⁶⁰

PARTS AND TOOLS

A1	x1	PCE	
A2	x1	PCE	
B	x1	PCE	
C	x1	PCE	
D	x1	PCE	
E	x1	PCE	
F	x2	PCS	
G	x4	PCS	
H	x1	PCE	
I	x2	PCS	
K	x1	PCE	5mm 
L	x1	PCE	4mm 
M	x1	PCE	2.5mm 
N	x1	PCE	

Follow instructions, and if there are steps that are incomprehensible, please let us know and we will get back to you. For assembly, use only prescribed tools.

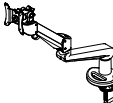


FORMING FUNCTION

USER MANUAL

STEP 1A ASSEMBLY ON TABLE EDGE

See step 1B for assembly in grommet hole.


Make sure table clamp has correct position according to table thickness.

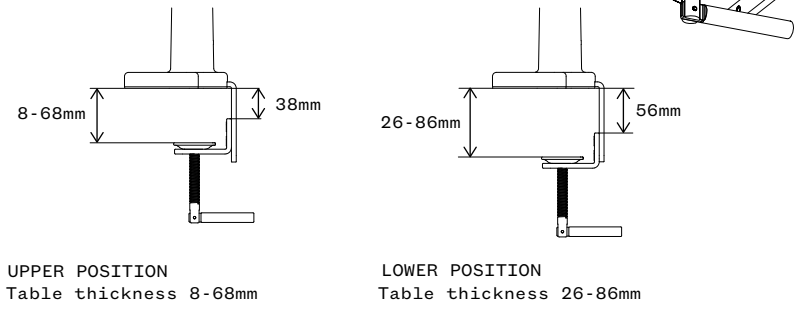

UPPER POSITION
Table thickness 8-68mm

LOWER POSITION
Table thickness 26-86mm


Adhere the pad to the base of the clamp.
Then fasten the clamp to the desk.

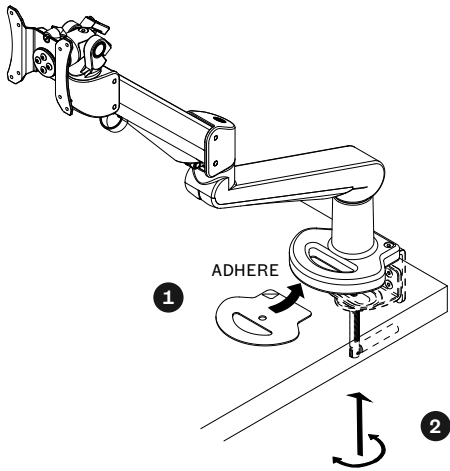

STEP 1B GROMMET ASSEMBLY


Use allen key to loosen the 4 screws, then detach clamp mount from the arm.

Note: Keep the screws as they will be used to attach the grommet mount.

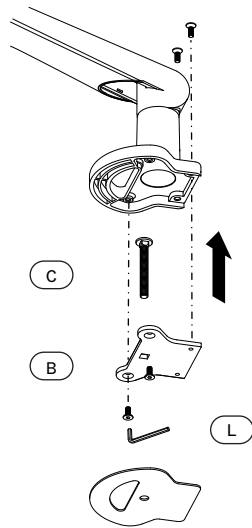

Place the bolt and small metal grommet mount plate on the bottom of the arm and attach with screws from last step.

Adhere the pad to protect the surface of the desk.

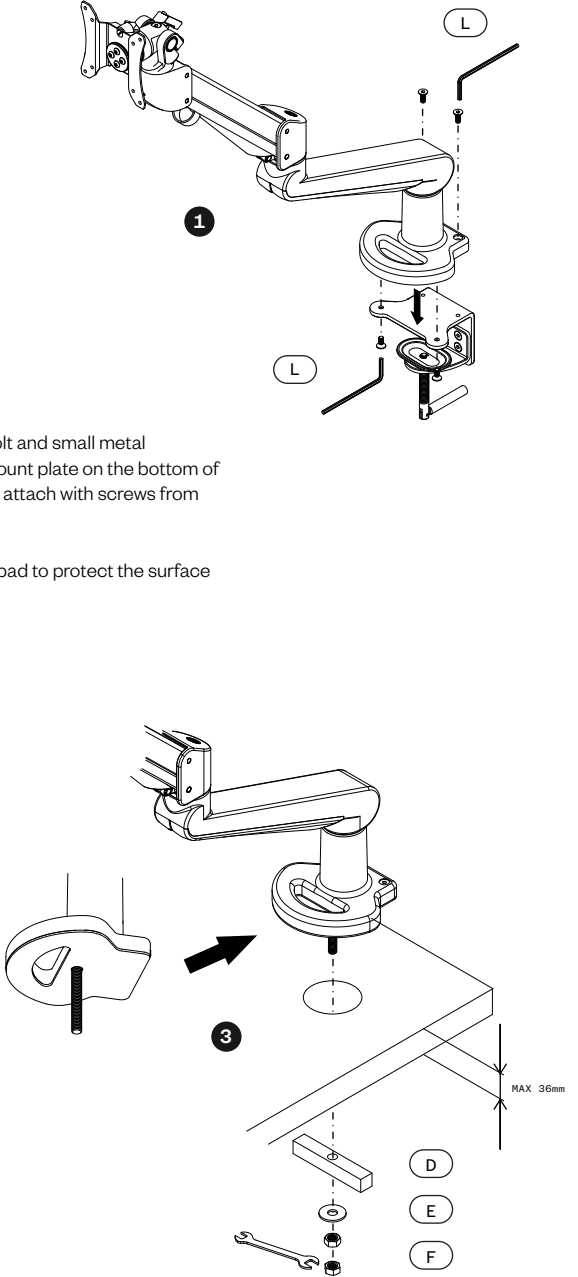


Attach the arm to the desk by positioning over the grommet hole. Grommet hole diameter should be 20-50mm.

Secure the arm using the remaining parts as shown.


STEP 2

Put the plastic cover on the screws.

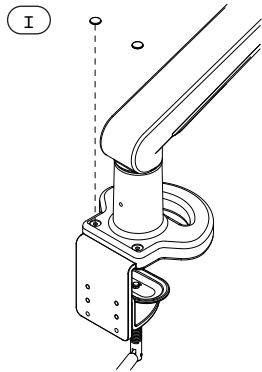


STEP 3

Turn the handle counter clockwise to pull back VESA lock, then pull the VESA plate upward to separate from the arm.

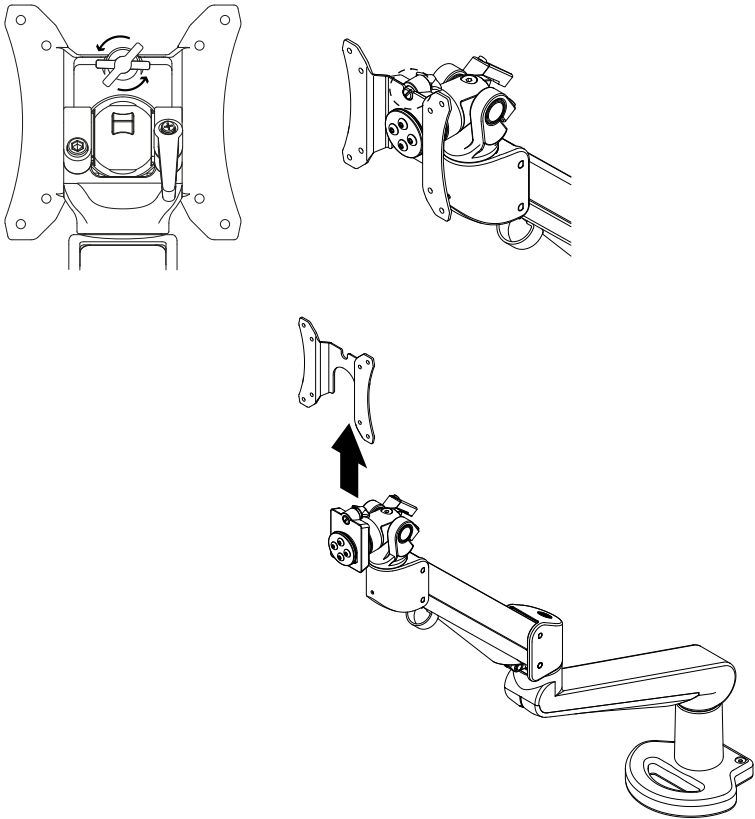


STEP 6

Slide the cable cover upward to allow room for cables to be placed inside.

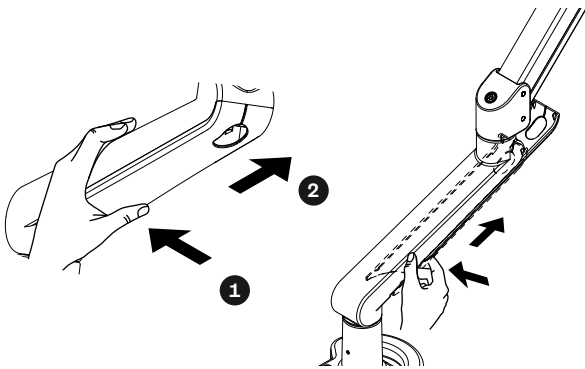


Pinch the small cable bracket to remove it.

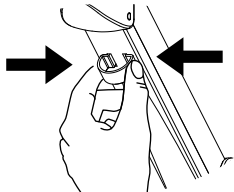


Route cables under arm then slide the cover back on.

Put back the small cable bracket.

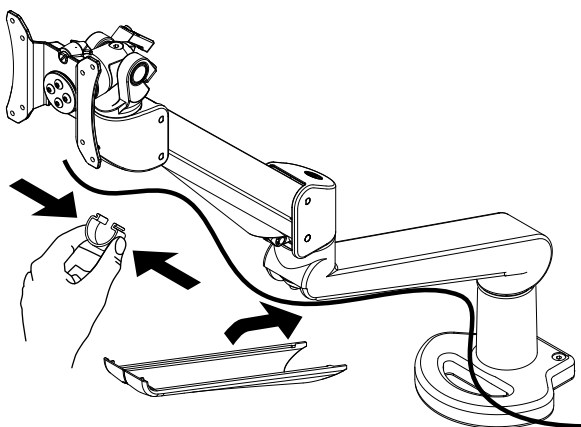


STEP 4

Place monitor face down on a flat surface. Align the VESA plate with the holes on the back of the monitor and attach using the provided screws.

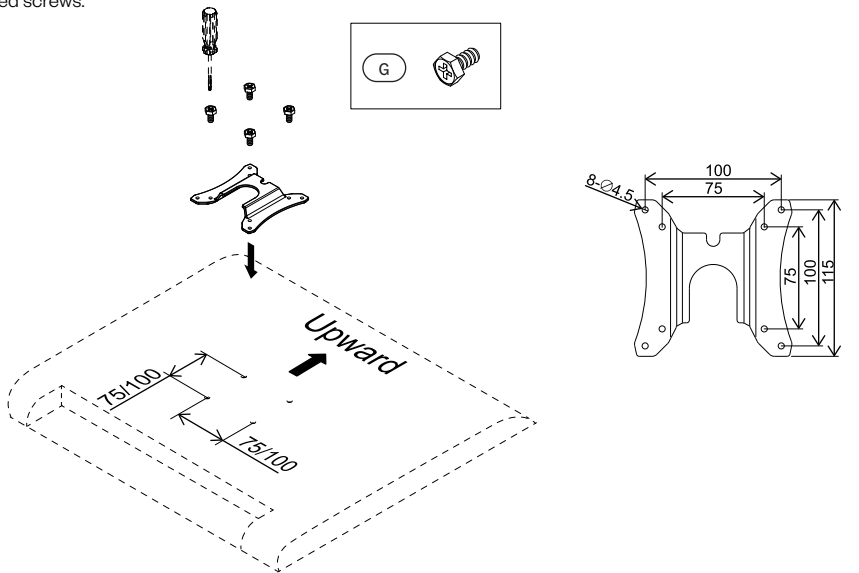

STEP 5

Slide the monitor (with VESA plate) onto the arm making sure it locks securely into place.

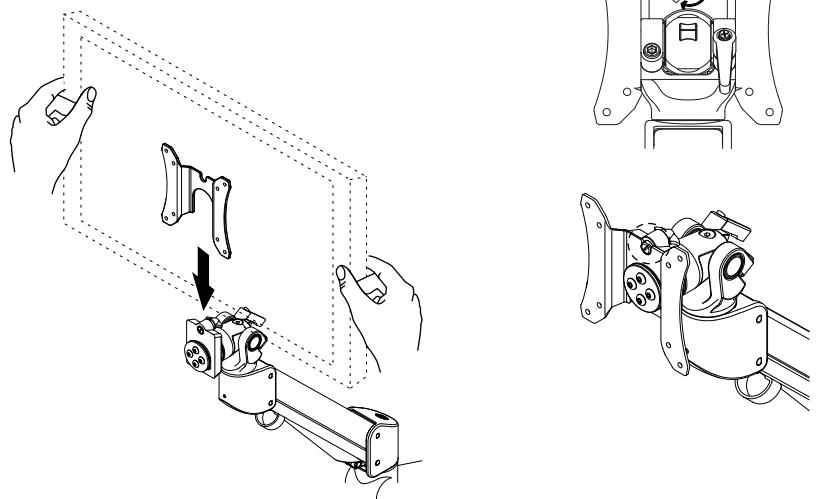


TENSION ADJUSTMENTS

CAUTION:
Support and hold on to the arm while adjusting the tension.

- RECOMMENDATIONS:
- 8-19 kg (17.6-41.8 lbs).
 - The products loading capacities are based on monitors' center of gravity less than 3 cm from the end of the VESA interface.
 - Loading capacity could be reduced if the monitor size is greater than 26 inches or if the thickness exceeds 5.5 cm.
 - All product specifications in catalogues are subject to change without notice.

Use the lever to adjust tilt function. Turn clockwise for heavier monitors.

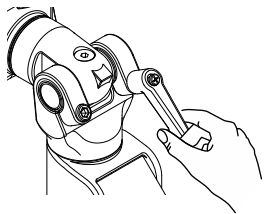

ADJUSTMENT:
Use the Allen key provided to adjust the tension to correspond to the weight of the desired monitor. Turn the Allen key counter-clockwise to adjust for heavier monitors; clockwise for lighter monitors. Once the adjustment is done, the monitor should be experienced as weightless and the monitor should remain in any position without dropping nor rising.

Optinal:
Fasten the screw with allen key and then rotate one turn counter clockwise to limit the rotation of the monitor arm to 180°.

