



Twice Corner

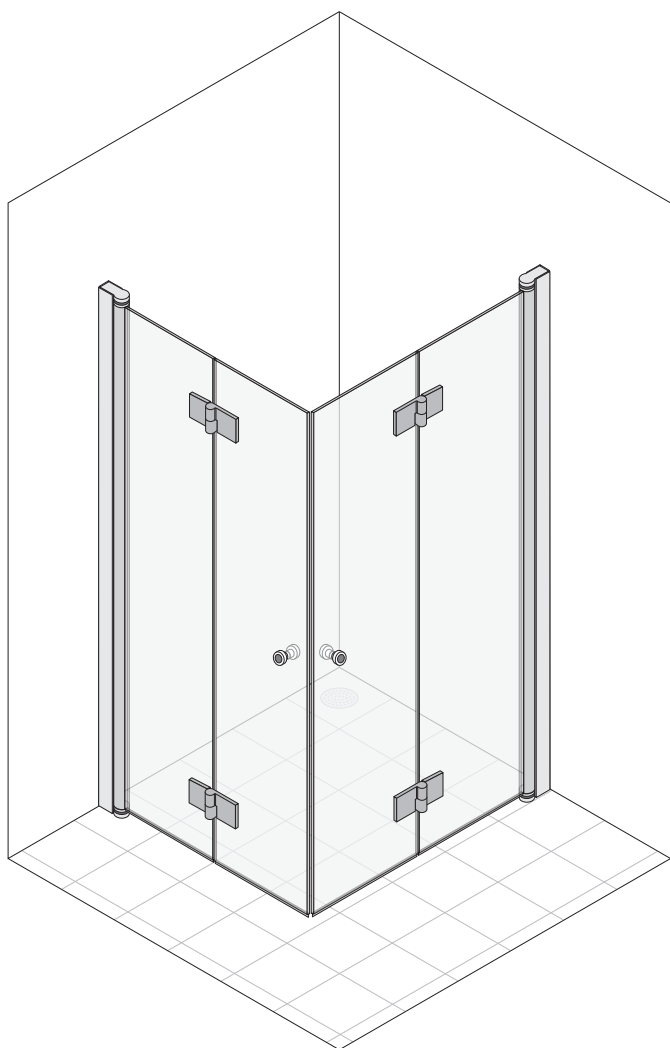

Twice Nišš

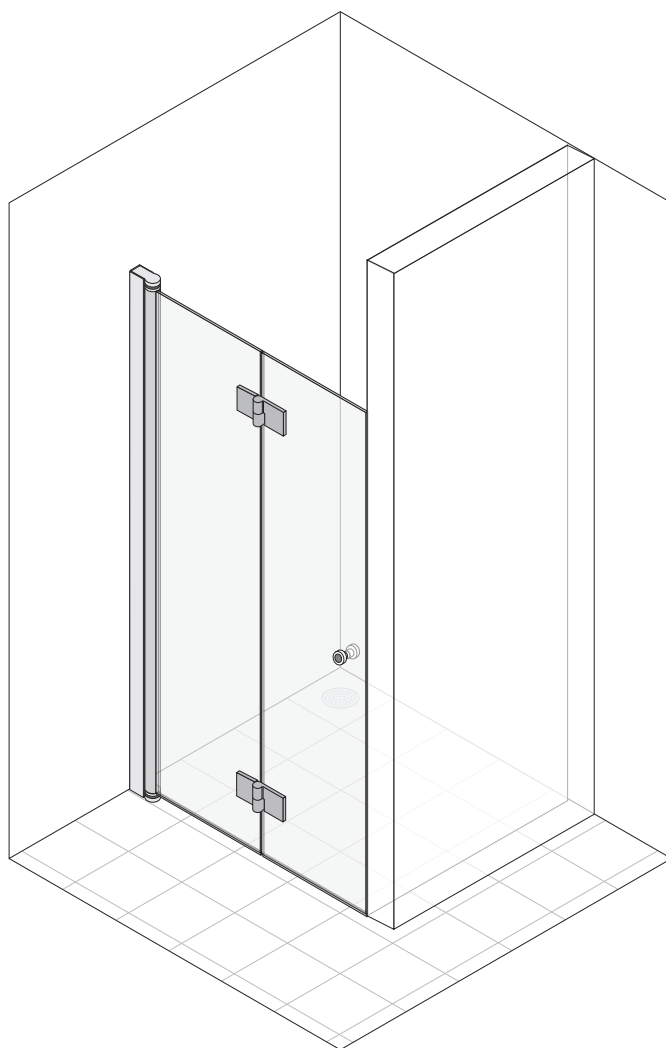

EESTI

(EST) Paigaldusjuhend DUSCHY dušiustele.


Paigaldusjuhendeid täiendatakse regulaarselt. Uusima versiooni leidmiseks külastage Meie veebisaiti.

ENGLISH


(EN) Installation instructions for DUSCHY shower wall. We constantly improve our installation instructions. Visit our website for the latest version.

(EST) Tootekoodid:
(EN) Code:

(EST) Suurus (EN) Size	L	R
700	5371-7	5361-7
800	5371-8	5361-8
900	5371-9	5361-9
1000	5371-10	5361-10
1100	5371-11	5361-11
1200	5371-12	5361-12

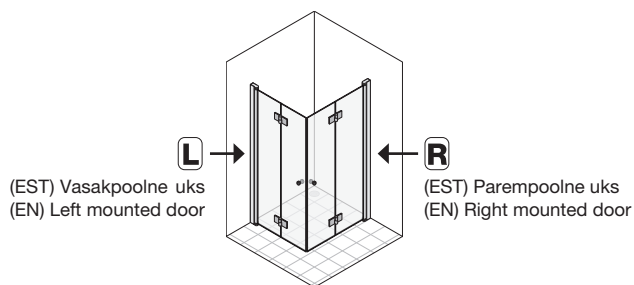


Twice Corner




(EST) Suurus (EN) Size	(EST) Reguleeritavus (EN) Adjustability
700 L x R	$X_1 \times X_2$
700 x 700	685-705 x 685-705
700 x 800	685-705 x 785-805
700 x 900	685-705 x 885-905
700 x 1000	685-705 x 985-1005
700 x 1100	685-705 x 1085-1105
700 x 1200	685-705 x 1185-1205
800 L x R	$X_1 \times X_2$
800 x 700	785-805 x 685-705
800 x 800	785-805 x 785-805
800 x 900	785-805 x 885-905
800 x 1000	785-805 x 985-1005
800 x 1100	785-805 x 1085-1105
800 x 1200	785-805 x 1185-1205
900 L x R	$X_1 \times X_2$
900 x 700	885-905 x 685-705
900 x 800	885-905 x 785-805
900 x 900	885-905 x 885-905
900 x 1000	885-905 x 985-1005
900 x 1100	885-905 x 1085-1105
900 x 1200	885-905 x 1185-1205

(EST) Suurus (EN) Size	(EST) Reguleeritavus (EN) Adjustability
1000 L x R	$X_1 \times X_2$
1000 x 700	985-1005 x 685-705
1000 x 800	985-1005 x 785-805
1000 x 900	985-1005 x 885-905
1000 x 1000	985-1005 x 985-1005
1000 x 1100	985-1005 x 1085-1105
1000 x 1200	985-1005 x 1185-1205
1100 L x R	$X_1 \times X_2$
1100 x 700	1085-1105 x 685-705
1100 x 800	1085-1105 x 785-805
1100 x 900	1085-1105 x 885-905
1100 x 1000	1085-1105 x 985-1005
1100 x 1100	1085-1105 x 1085-1105
1100 x 1200	1085-1105 x 1185-1205
1200 L x R	$X_1 \times X_2$
1200 x 700	1185-1205 x 685-705
1200 x 800	1185-1205 x 785-805
1200 x 900	1185-1205 x 885-905
1200 x 1000	1185-1205 x 985-1005
1200 x 1100	1185-1205 x 1085-1105
1200 x 1200	1185-1205 x 1185-1205

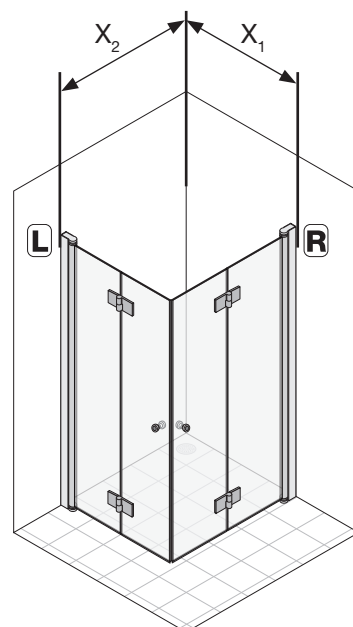


(EST) X_1 = L-ukse reguleeritavus
 X_2 = R-ukse reguleeritavus




(EN) X_1 = L door adjustability
 X_2 = R door adjustability



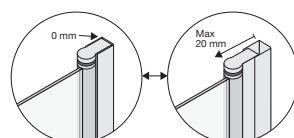


Twice Nišš




(EST) Storlek (EN) Size	(EST) Reguleeritavus (X) (EN) Adjustability (X)
700	672-692
800	772-792
900	872-892
1000	972-992
1100	1072-1092
1200	1172-1192

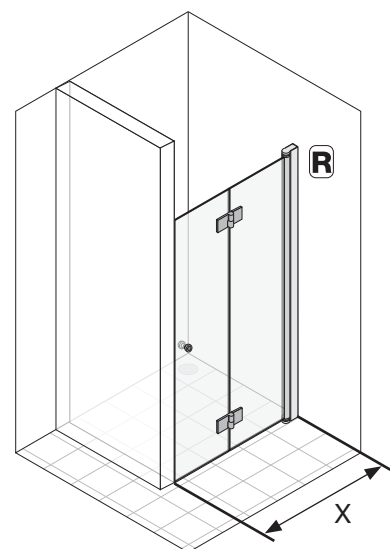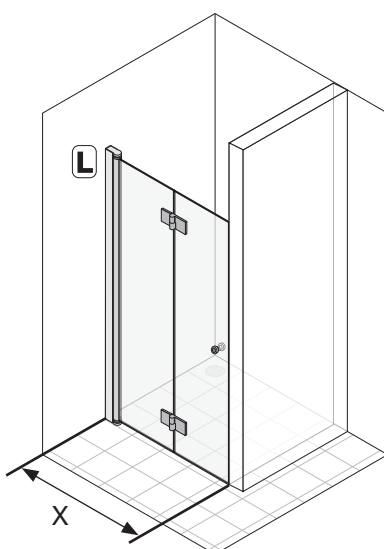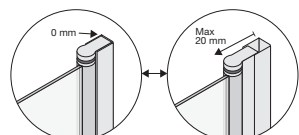

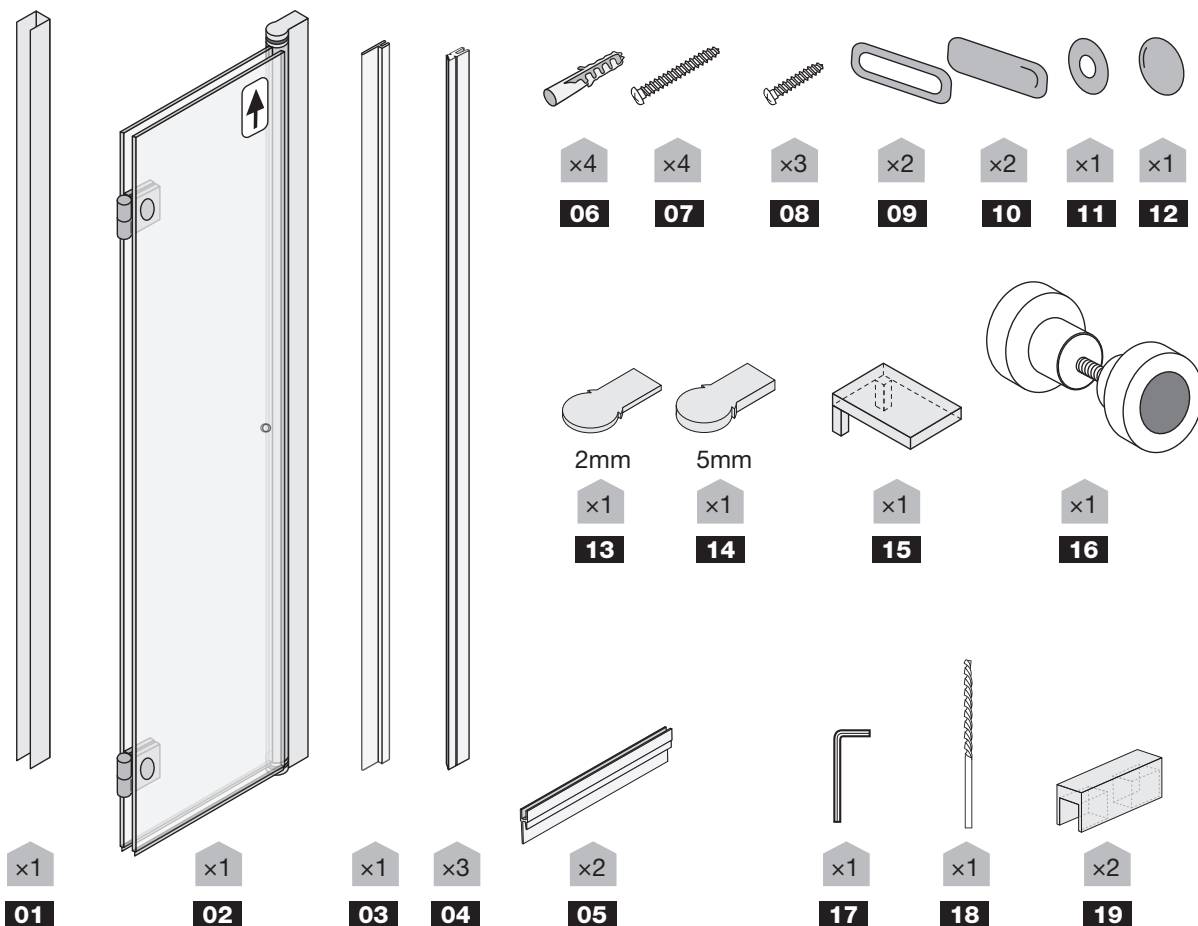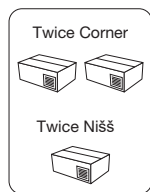


(EST) Ei kuulu komplekti.
(EN) Not included.

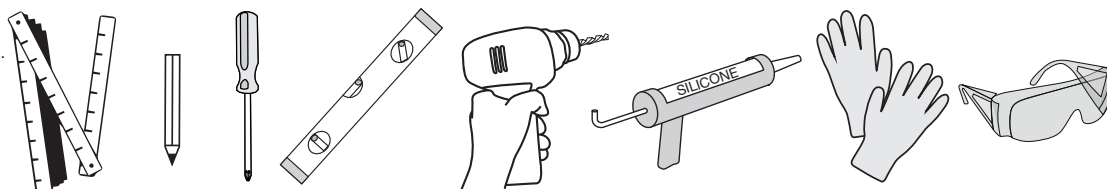


(EST) Kipssein: 1) Puurida ainult läbi pealispinna ja hüdroisolatsiooni. 2) Täita silikooniga. 3) Kruvi peaks kinnituma vineeri.

(EN) Wet area wall: 1) Drill only through surface and waterproofing. 2) Fill with sealant. 3) Screw should attach to the plywood.

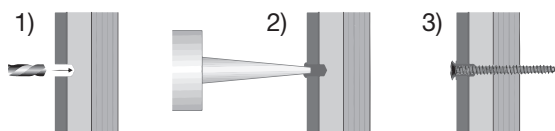


(EST) Talasein:
1) Puurida. 2) Silikoonida. 3) Kruvida.

(EN) Wall with beams:
1) Drill. 2) Sealant. 3) Screw.

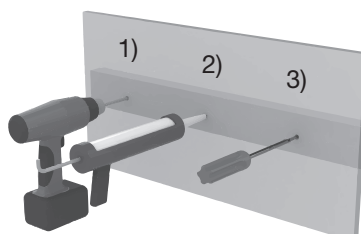


(EST) Betoonsein: 1) Puurida. 2) Täita. 3) Tüübel. 4) Silikoonida. 5) Kruvida.

(EN) Concrete wall: 1) Drill. 2) Silicone. 3) Plug. 4) Sealant. 5) Screw.

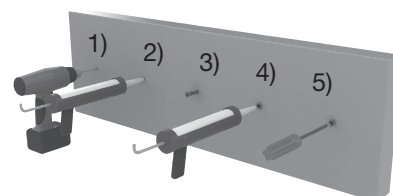


© Säker Vatten AB


1

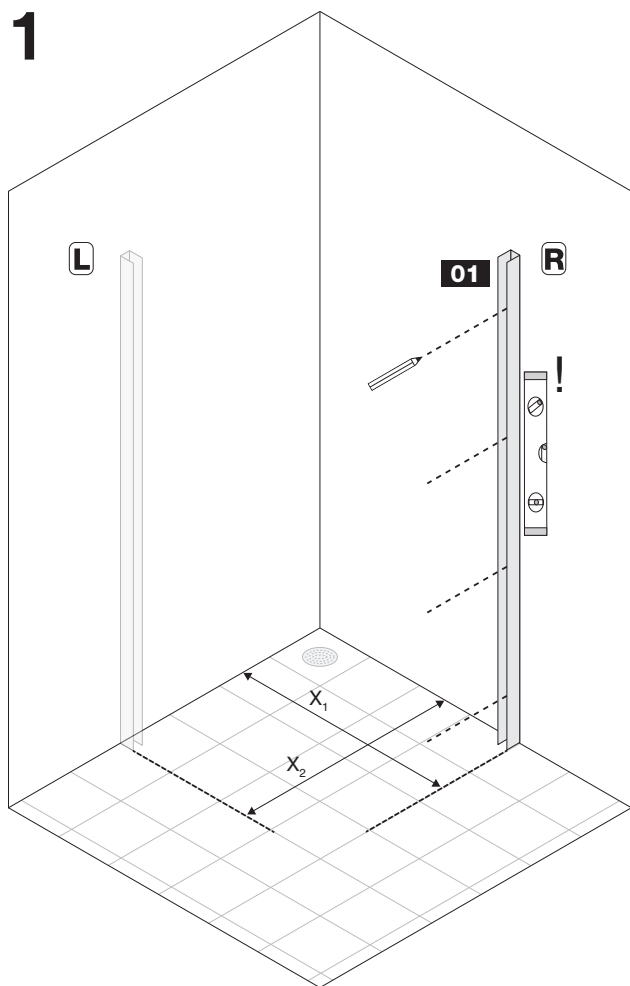


2

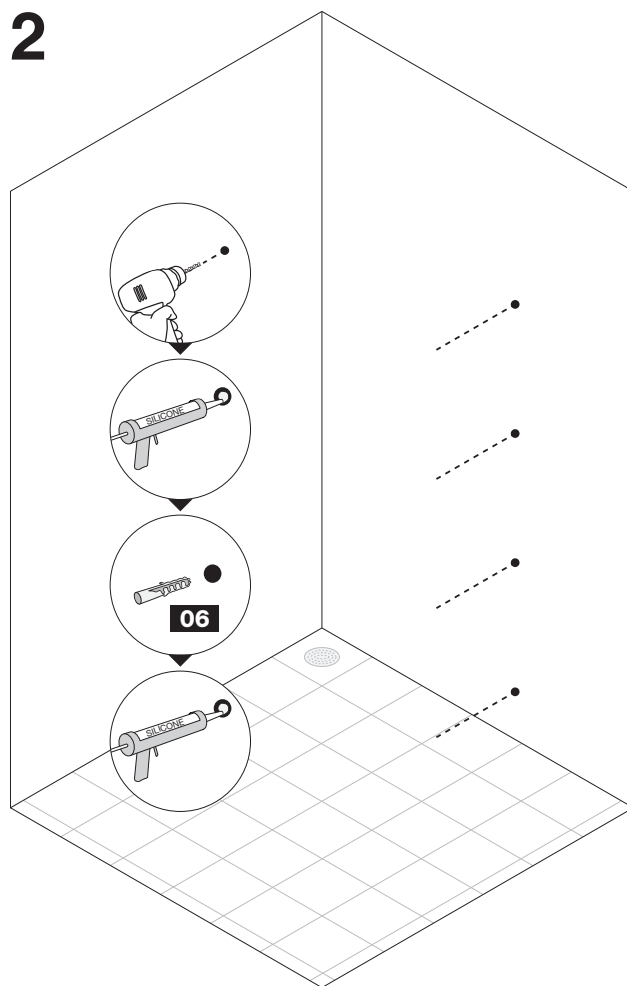


3

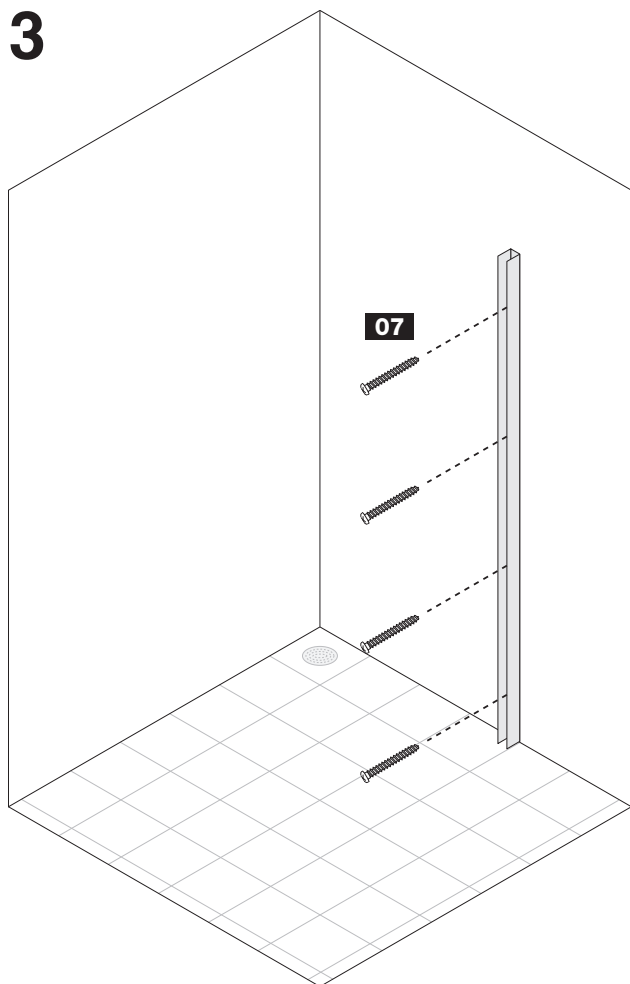


4

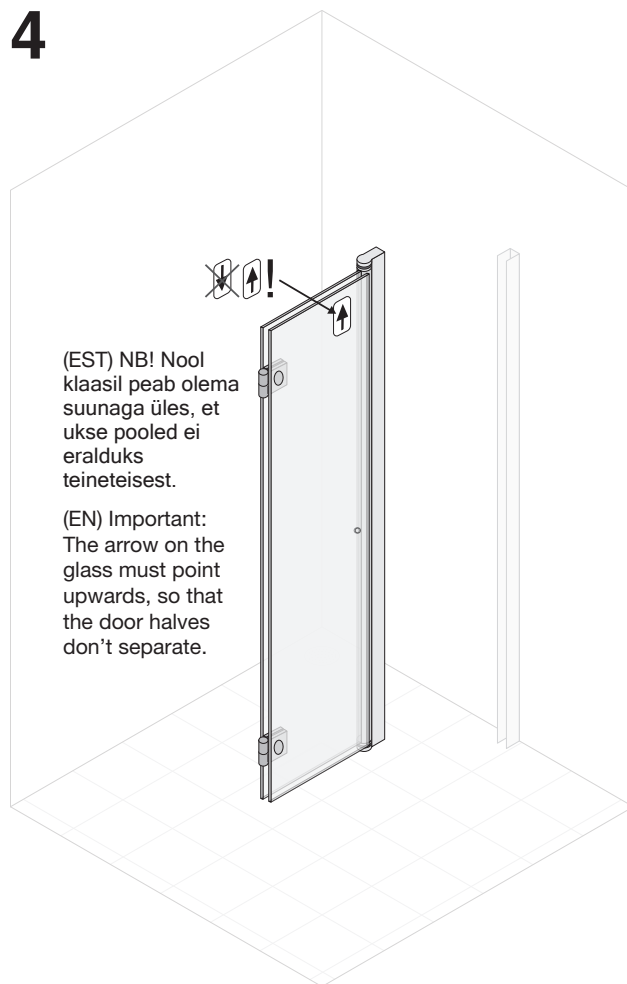



5

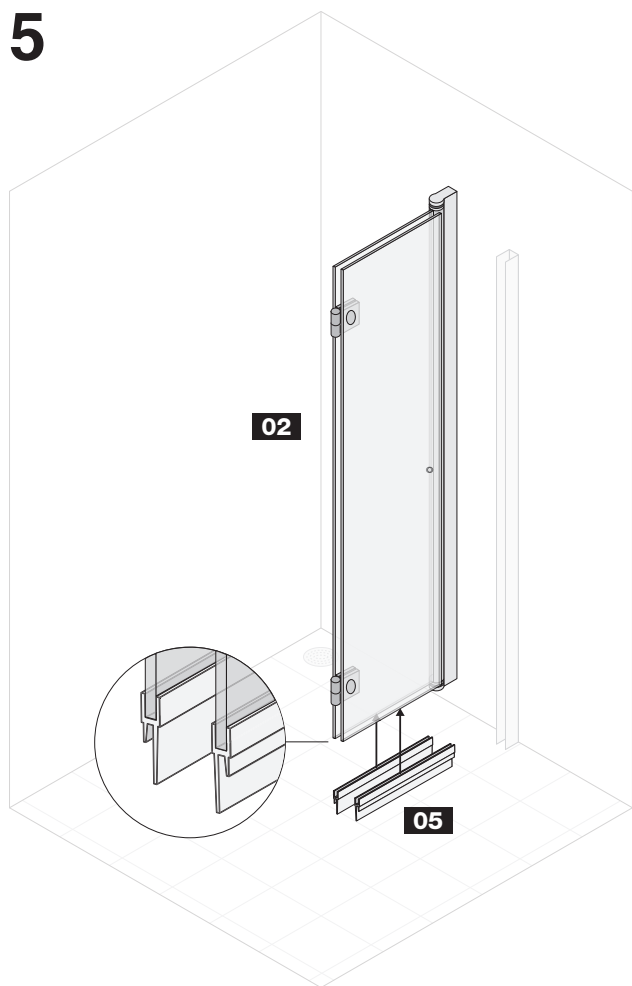


6

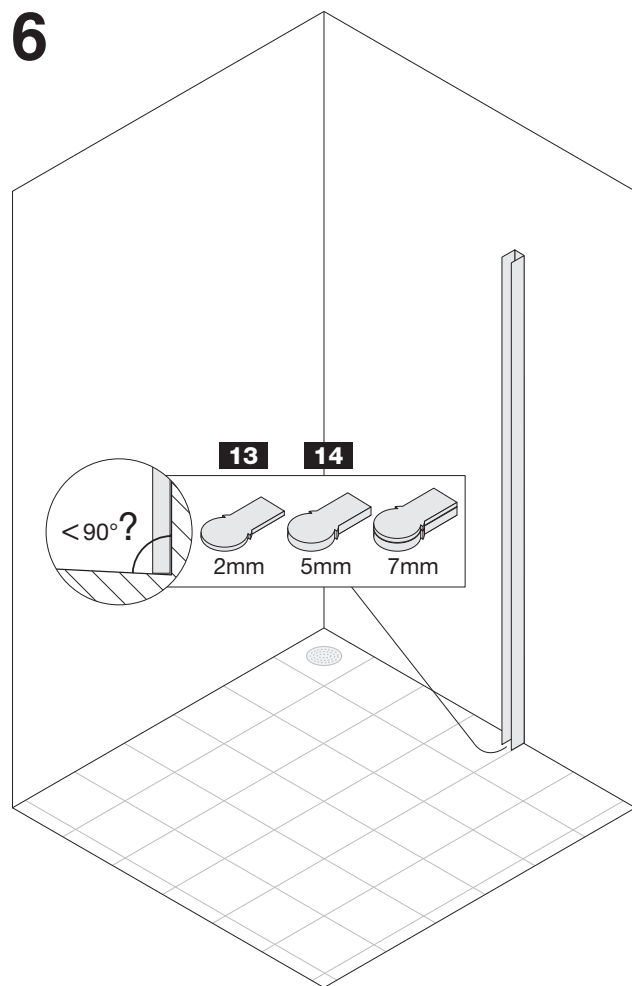

7

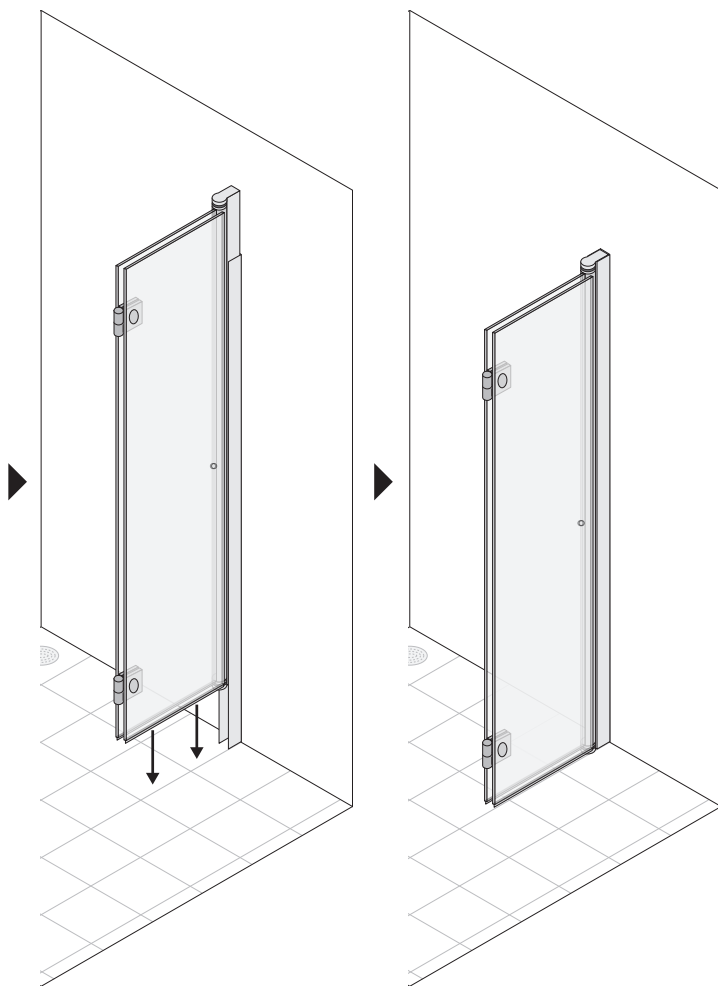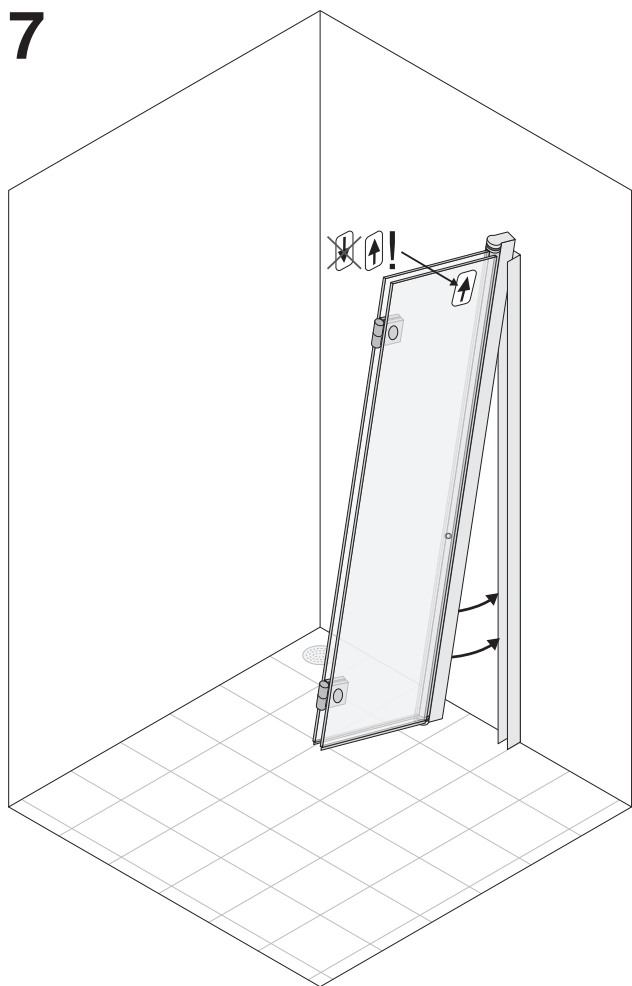


8

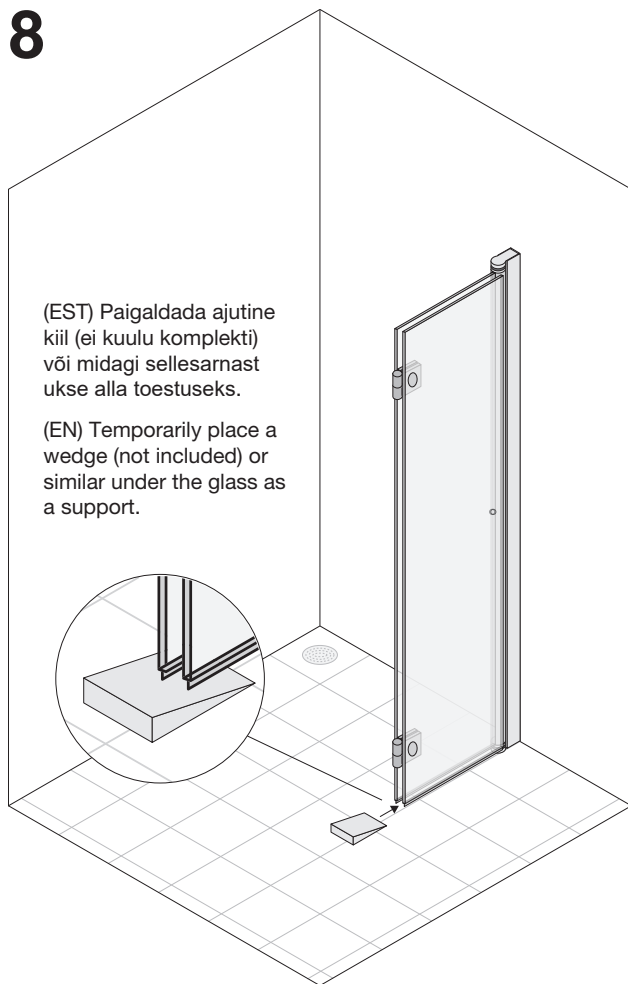

9

(EST) **TEHA KINDLAKS, ET:**
Alumine hing on lukustatud:
Keerata kuuskantkruvi **vastupäeva**.

(EN) **MAKE SURE THAT:**
The lower hinge is locked:
Tighten the hex screw **anti-clockwise**.

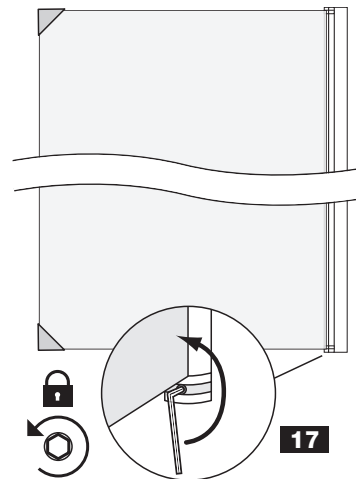

! (EST) Lukustamine: vastupäeva.
(EN) Lock: anti-clockwise.

10

(EST) **AINULT VAJADUSEL!**


Tarnehetkel on ukse nullasend seadistatud standardset. Allpool olevad juhised abistavad Teid ukse nullasendi muutmisel.

(EN) **ONLY IF NECESSARY!**

The door's neutral position is set to standard angle at delivery. The neutral position is the angle where door is lowered and staying when it is closed. The door will raise when opening it. The instructions below show how to change the angle of the neutral position, if this is needed.

(EST) 1) Avada alumine hing, keerates kuuskantkruvi **päripäeva**. Komplektis kuuskantvõti.


(EN) 1) Unlock the bottom hinge by screwing the hex screw **clockwise** with the enclosed hex key.

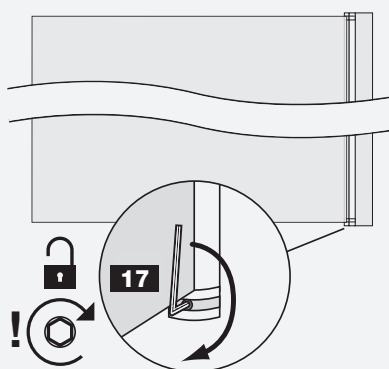

! (EST) Avamine: päripäeva.
(EN) Unlock: clockwise.


(EST) 2) Pöörata uks soovitud nurga alla (uus nullasend).

(EN) 2) Turn the door to the desired angle (new neutral position).

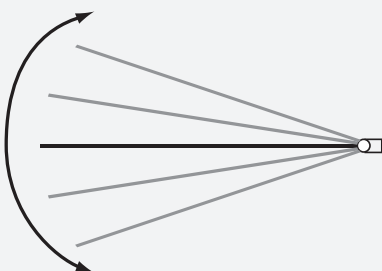


(EST) 3) Lukustada soovitud positsioon, keerates alumise hinge kuuskantkruvi **vastupäeva**.

(EN) 3) Lock the new position by screwing the hex screw **anticlockwise** in the bottom hinge.

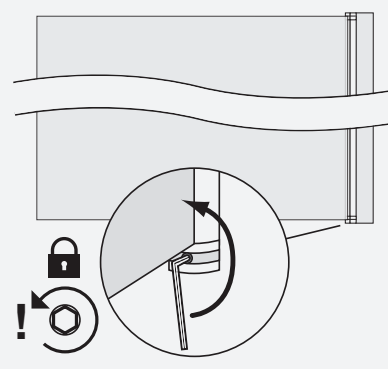


! (SV) Låsa: moturs.
(EN) Lock: anticlockwise.

11

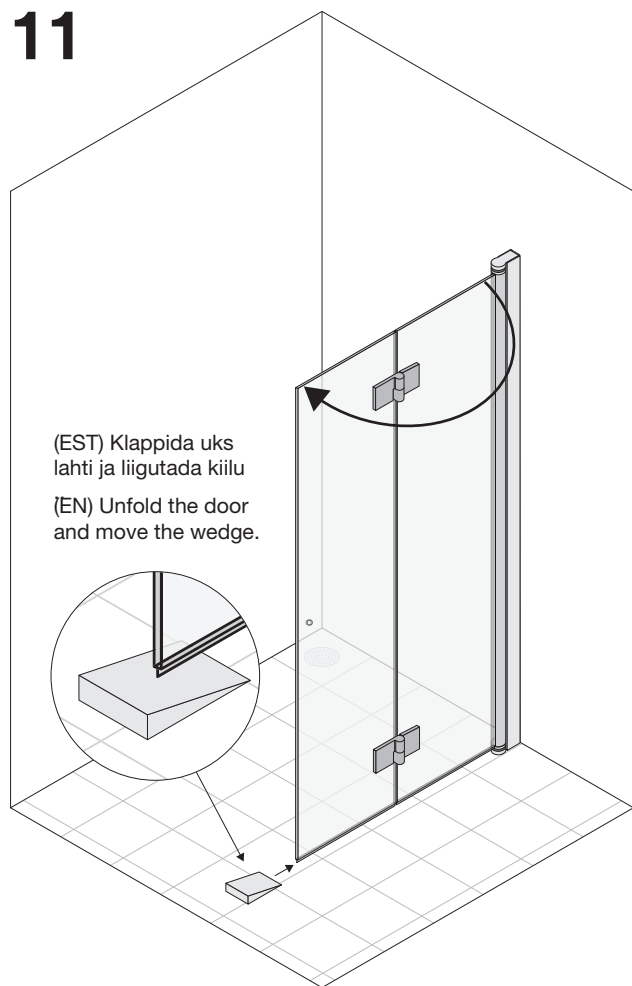

12

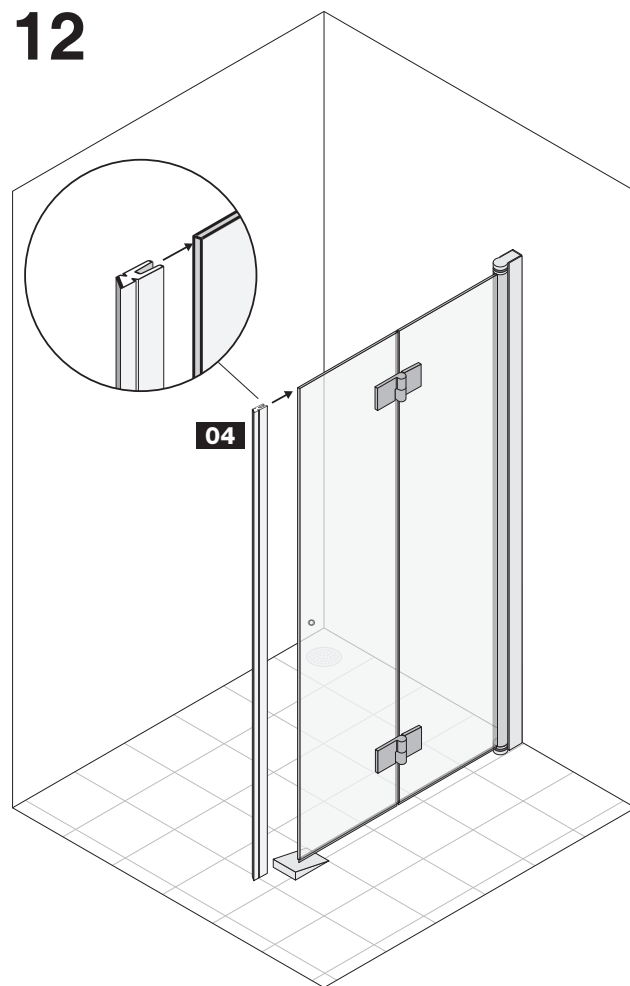

13

(EST) **AINULT VAJADUSEL!**



Ustevahelised klapphinged on reguleeritavad juhuks kui klaasid ei ole omavahel paralleelselt.

- 1) Eemaldada ilukatted.
- 2) Keerata lahti hinged, kasutades torx-võtit.
- 3) Paigaldada ajutised plastikpadjad klaaside vahele üla- ja alla, vt joonisel.
- 4) Reguleerida klaasid/hinged.
- 5) Kinnitada torx-kruvid.
- 6) Asetada tagasi ilukatted.


(EN) **ONLY IF NECESSARY!**

The hinges between the glass plates can be adjusted in case the glass plates are not parallel.

- 1) Remove the covers.
- 2) Unfix the hinges with a torx key.
- 3) Temporarily place the two plastic pads at the top and bottom between the glasses.
- 4) Adjust the glasses/hinges.
- 5) Tighten the torx screws.
- 6) Put the covers back.

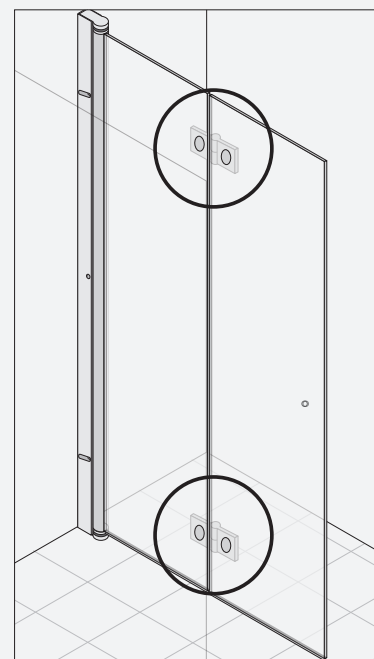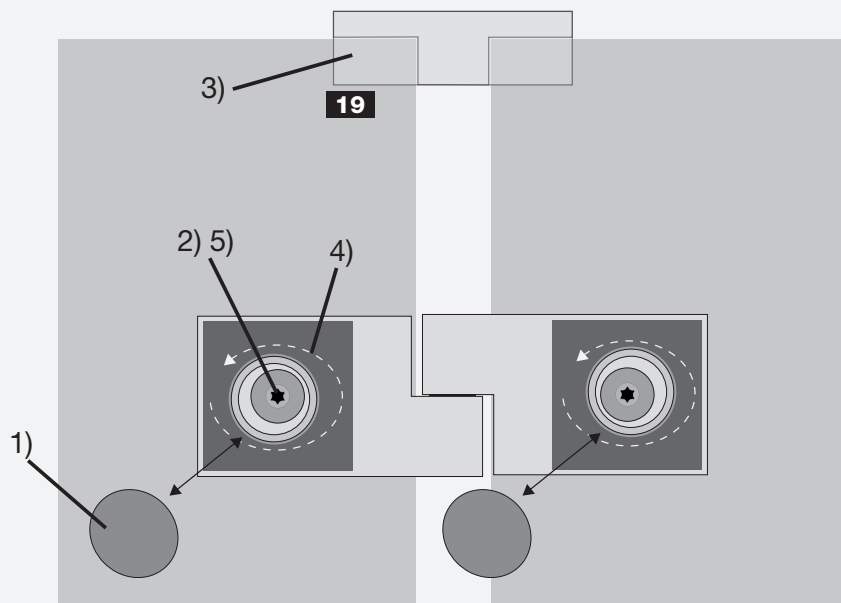

14

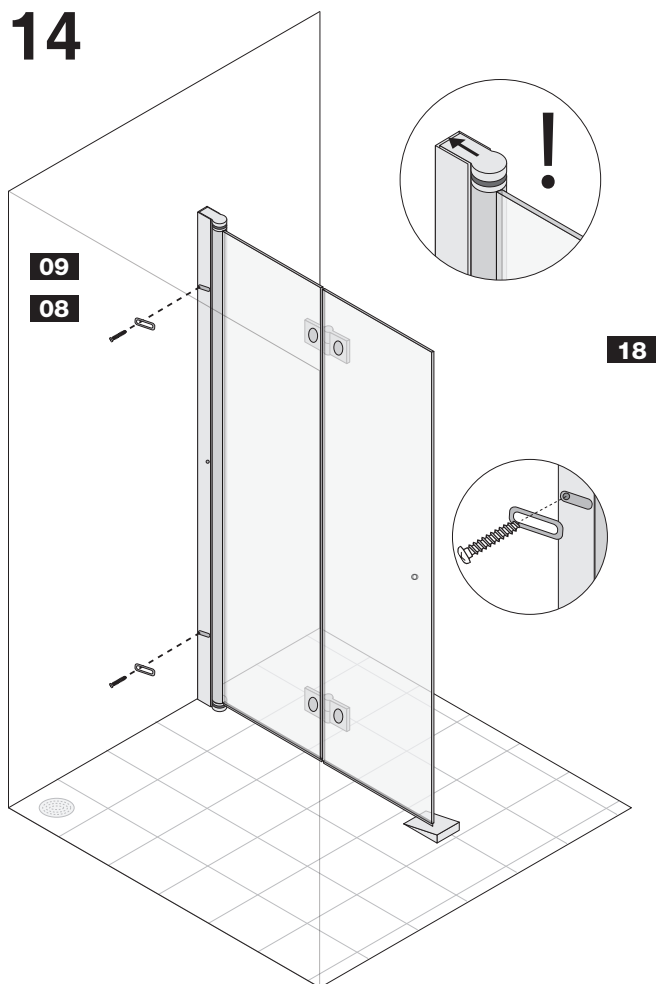


18

(EST) Kinnitada uks seinaprofiili külge. Mitte kinnitada kruvisid täielikult. Vajadusel uued augud puuritavad otse seinaprofiilile.

(EN) Attach the door to the wall profile in the upper and lower pre-drilled holes. Do not tighten the screws completely. If necessary, new holes can be drilled through the elongated holes in the wall profile.

15

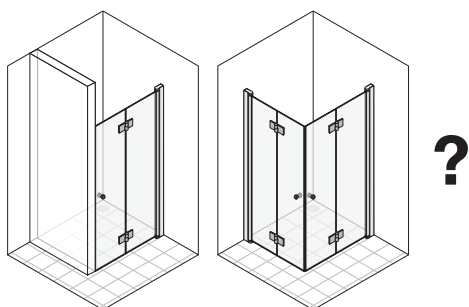


(EST) **Dušiüksed komplektina?**

Kui olete dušiüksi paigaldamas komplektina, siis korrata teise ukse puhul juhiseid.

(EN) **Two shower walls?**

If you are mounting a shower corner with two shower walls, the second door should now be mounted according to previous instructions.

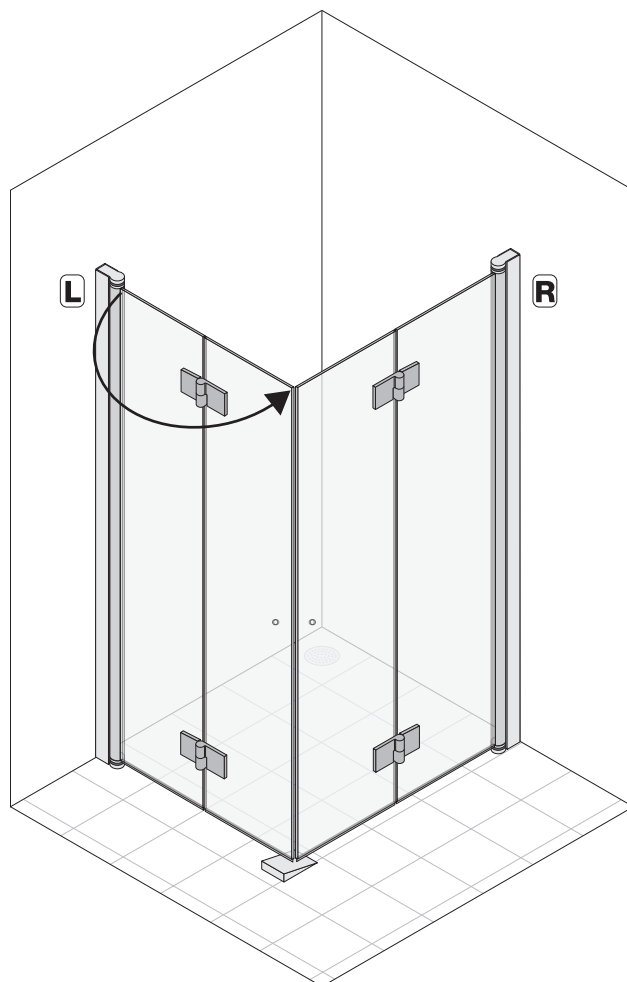

16 (EST) REGULEERITAVUS


Kaks dušiust nurgas: Seadistada ukseid nii, et nende välimised otsad oleksid vastakuti ja paraleelselt (joonis A).

Üks dušiuks niši sees: Seadistada uks nii, et välimine külg on vastasseinaga vastakuti ja paraleelselt.

Vajadusel on uks seinaprofiilist kuni 20 mm väljatõmmatav (joonis B ja C).

Samuti on võimalik reguleerida ukse nurka (joonis D ja E).

Vajadusel võimalik lisada ja eemaldada kõrgendusseibe (2, 5, 7 mm).

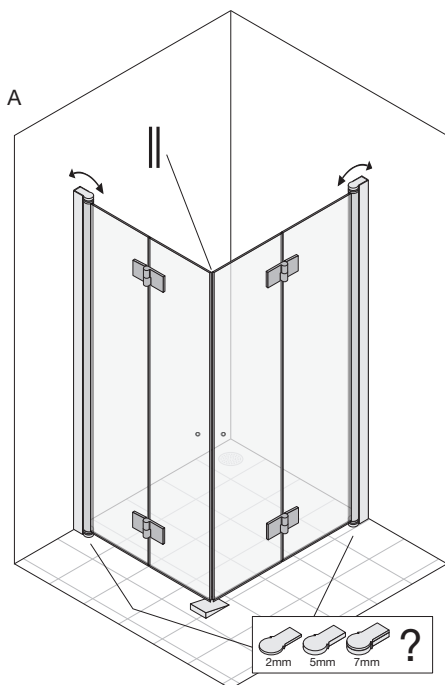


(EN) ADJUSTMENTS

Two shower walls in a corner: Adjust the walls so that their outer edges meet and are parallel (fig. A).

One shower wall in niche: Adjust the wall so that its outer edge meets and is parallel to the opposite wall.

It is possible to pull out the door up to 20 mm out of the wall profile (fig. B and C). It is also possible to adjust the angle of the door (fig. D and E).


If needed, add or remove elevation trays (2, 5, 7 mm).

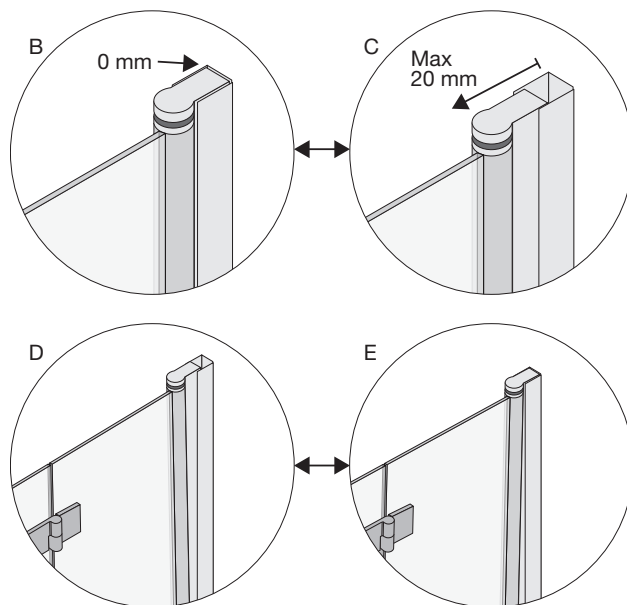


17

(EST) Kinnitada kõik kolm kruvi tugevalt.


(EN) Tighten all three screws firmly.

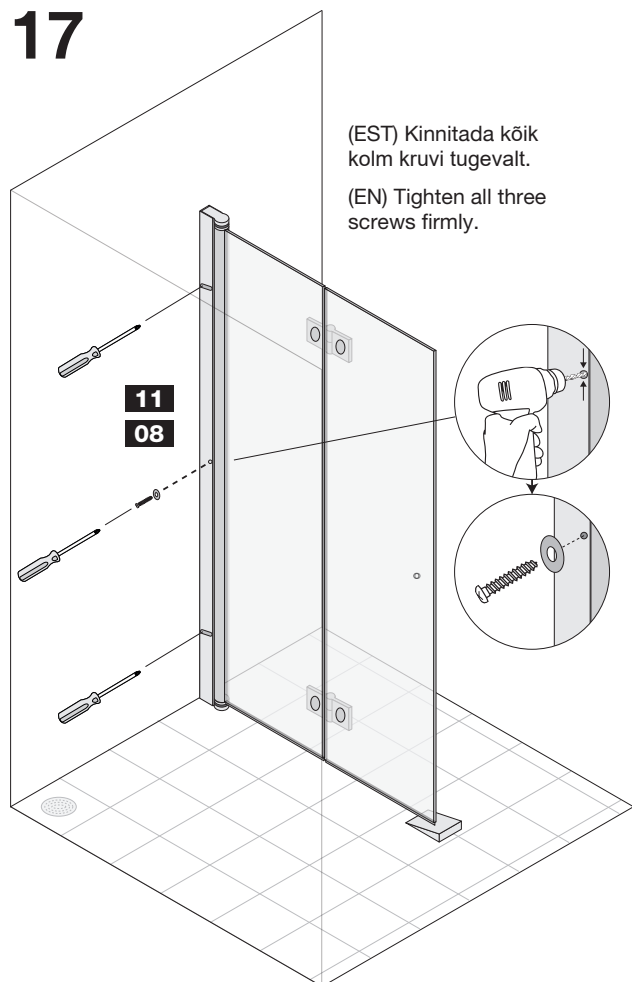


18

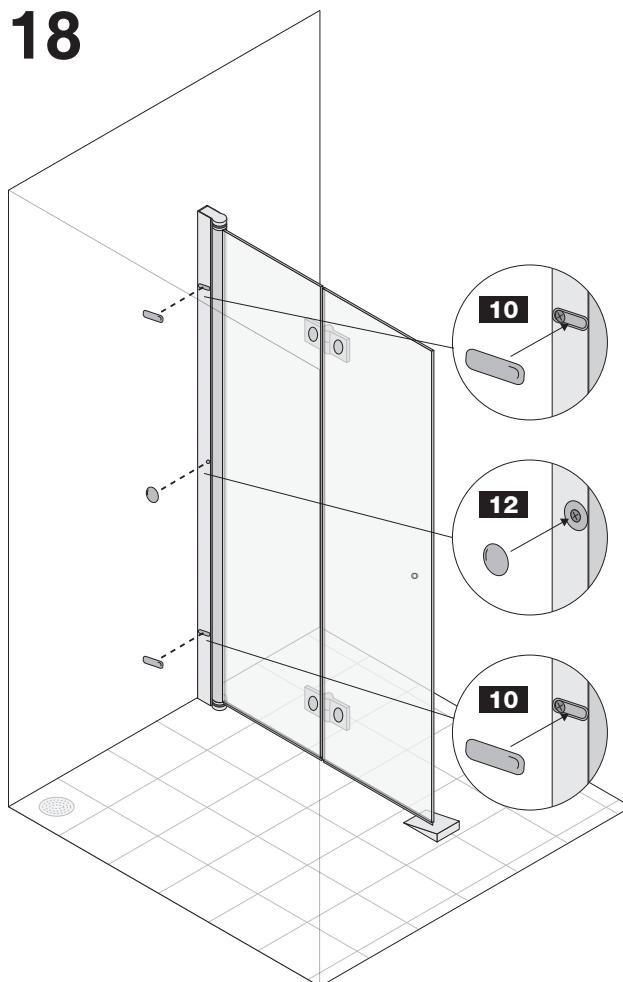


19

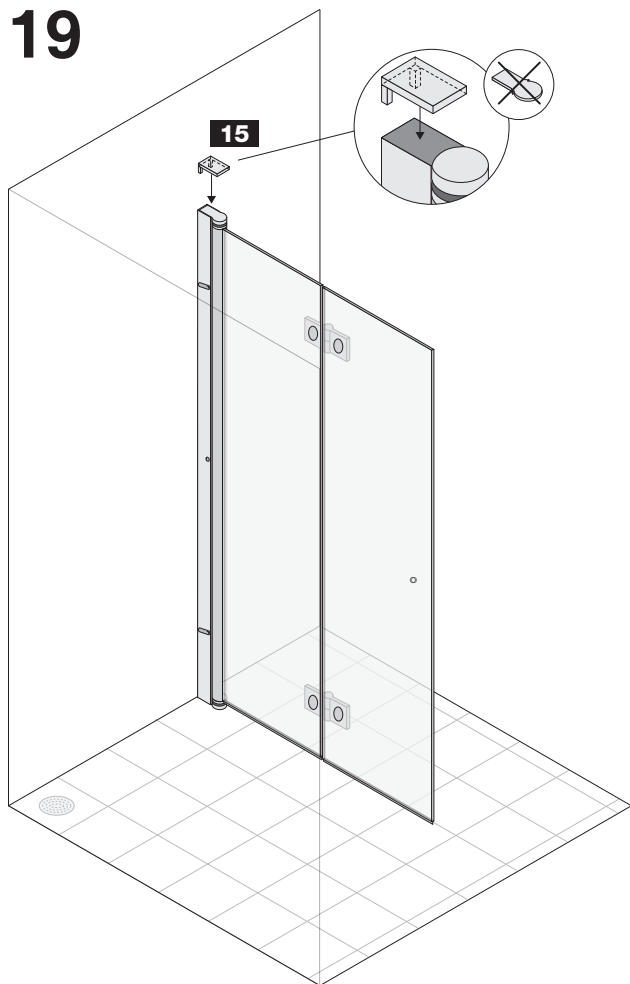


20

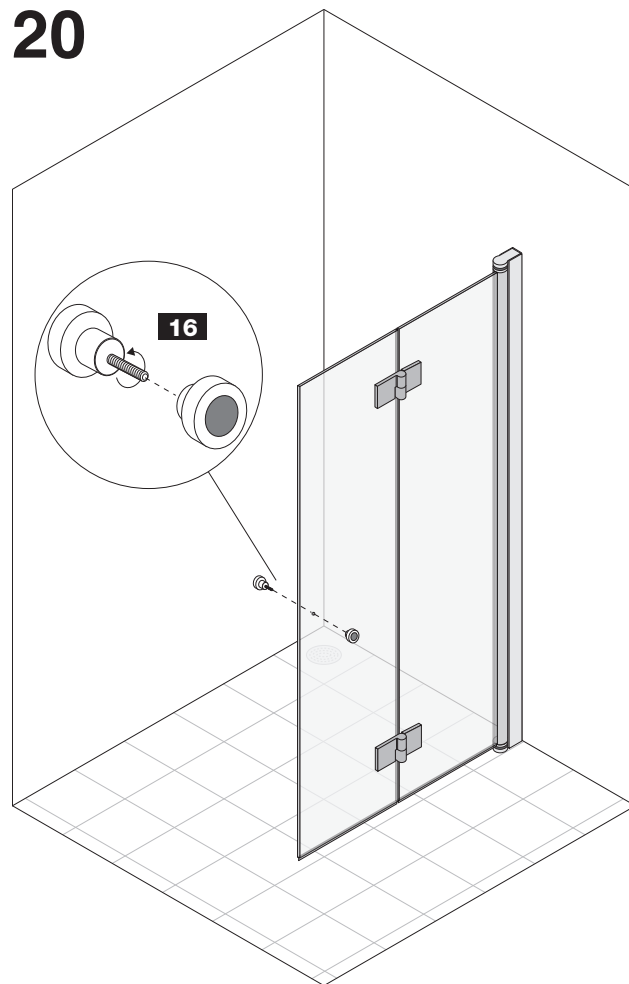


21

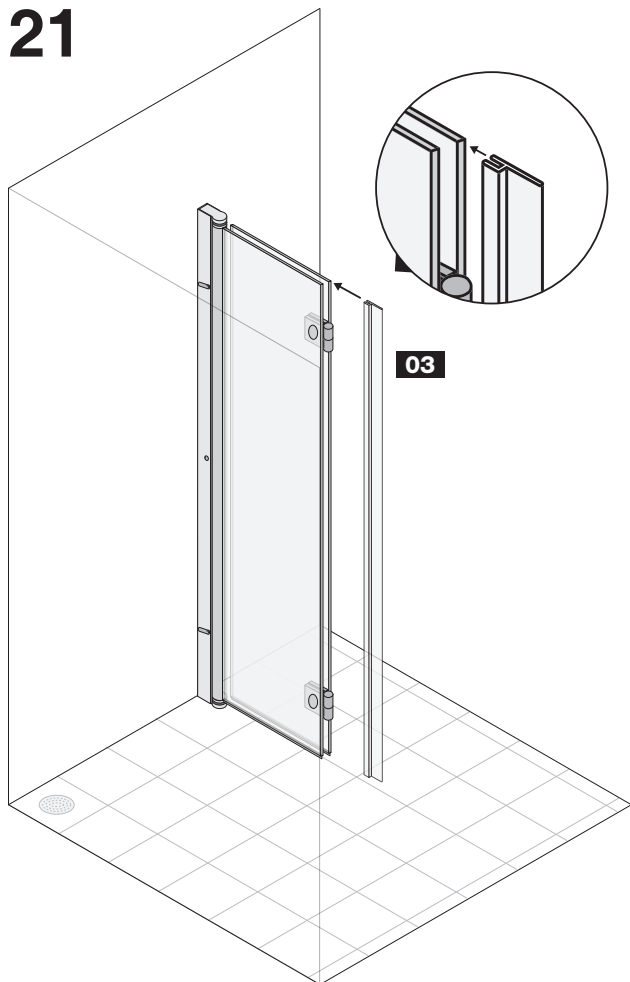

22

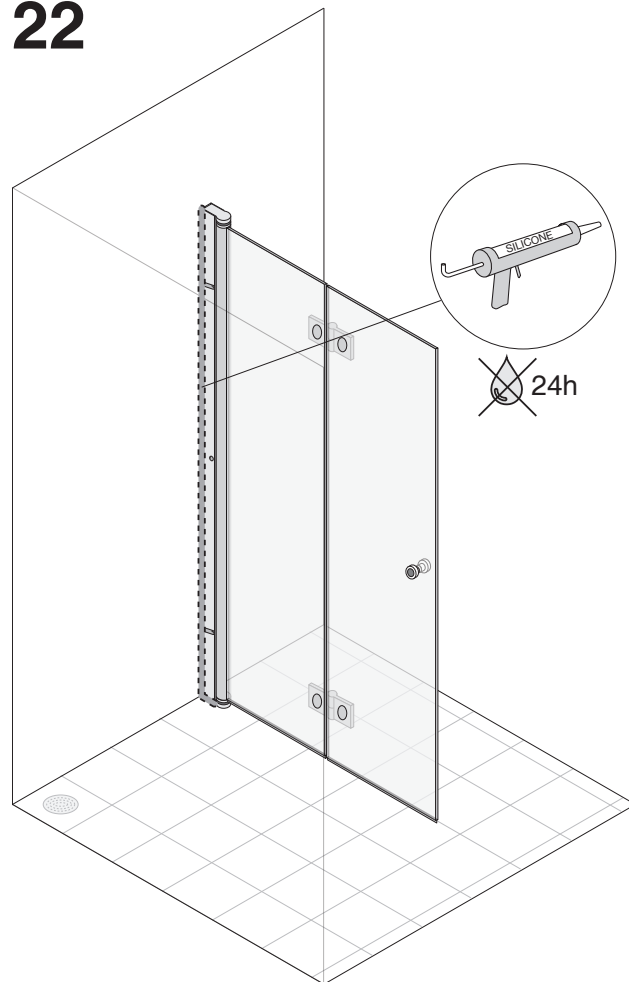

23

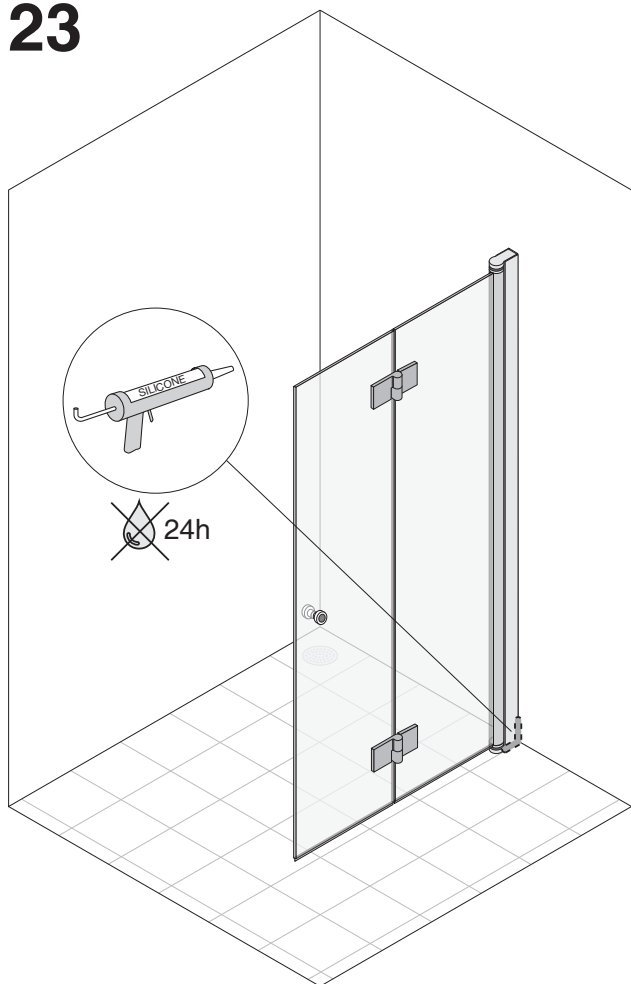



24

(EST) **AINULT VAJADUSEL!**


Ruum toruläbiviikudeks. Kasutada silikooni.

(EN) **ONLY IF NECESSARY!**

Piping through the wall profile. Use silicone.

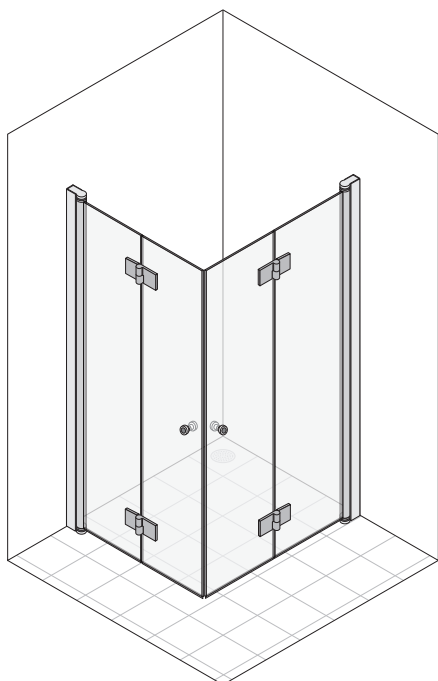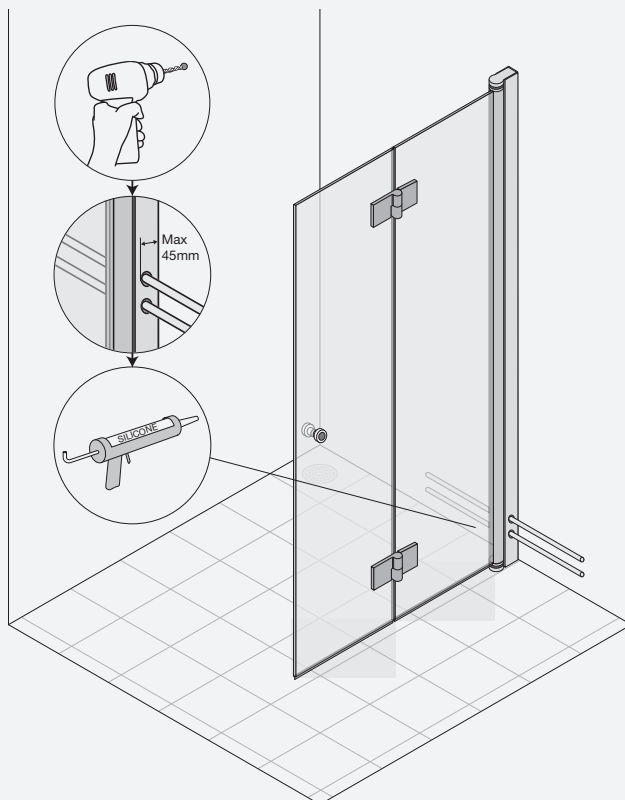

Twice Corner

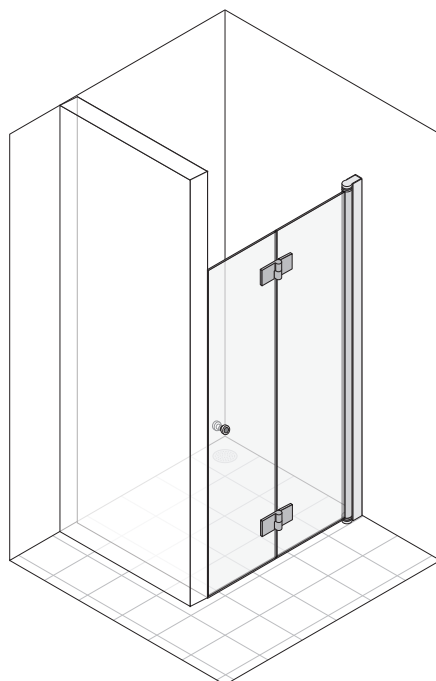

Twice Niss