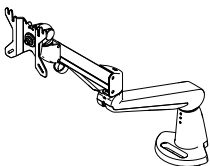


ELEVATE MONITOR ARM 53

PARTS AND TOOLS

A	x1	PCE		
B	x1	PCE		
C	x4	PCS	M4x10	
D	x4	PCS		
E	x4	PCS		
F	x1	PCE	2mm	
G	x1	PCE	5mm	
H	x1	PCE	6mm	
G	x1	PCE	NOT INCLUDED	


FORMING ℒ FUNCTION

USER MANUAL

Before installation: Please follow the instructions. If there is a step you don't understand, please contact your sales representative. Note that all measurements and conditions must be verified on site. Neither Forming Function nor any of its distributors can be held liable for product malfunction or other defects caused by improper installation.

STEP 1

Loosen the two upper set screws in the table clamp and remove them. Remove the arm. Set the arm and set screws aside, they will be reinserted in STEP 3.


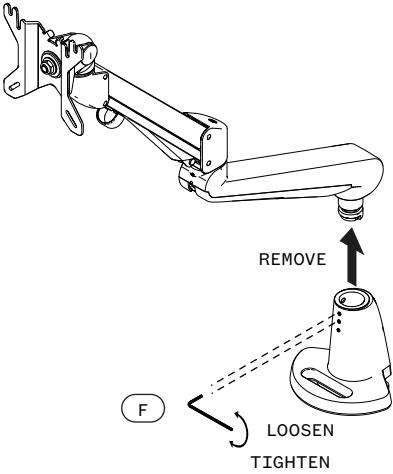


STEP 2

Turn the table clamp upside down, and adhere the rubber pad (B).

Turn the table clamp over again. Loosen the center bolt enough so that the clamp fits around the edge of your table.

Once in place around the edge of your table, tighten the center bolt using Allen Key (H) until you feel resistance.

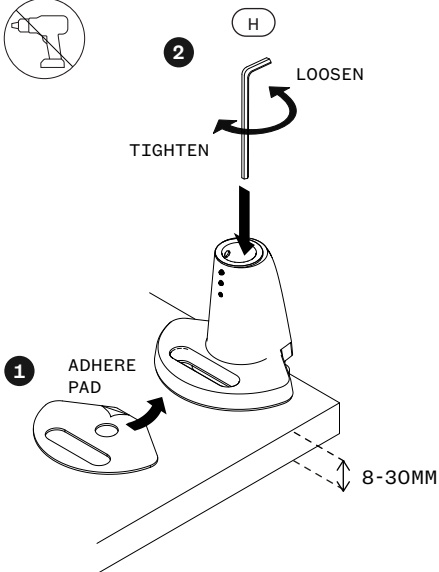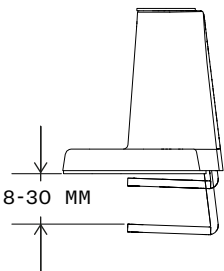

STEP 3

Reinsert the arm in the table clamp and reattach the set screws from STEP 1.



Tighten the middle screw fully, and then loosen it one turn.

Check that the arm cannot be removed.



STEP 4A


Check that the VESA bracket fits flats against the back of your monitor. If spacers (E) are needed, please proceed to STEP 4B.

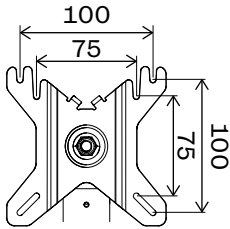

1 Mount both upper screws half-way into the monitor.



2 Slide the upper screws onto the tracks of the VESA bracket.

3 Fasten all four screws

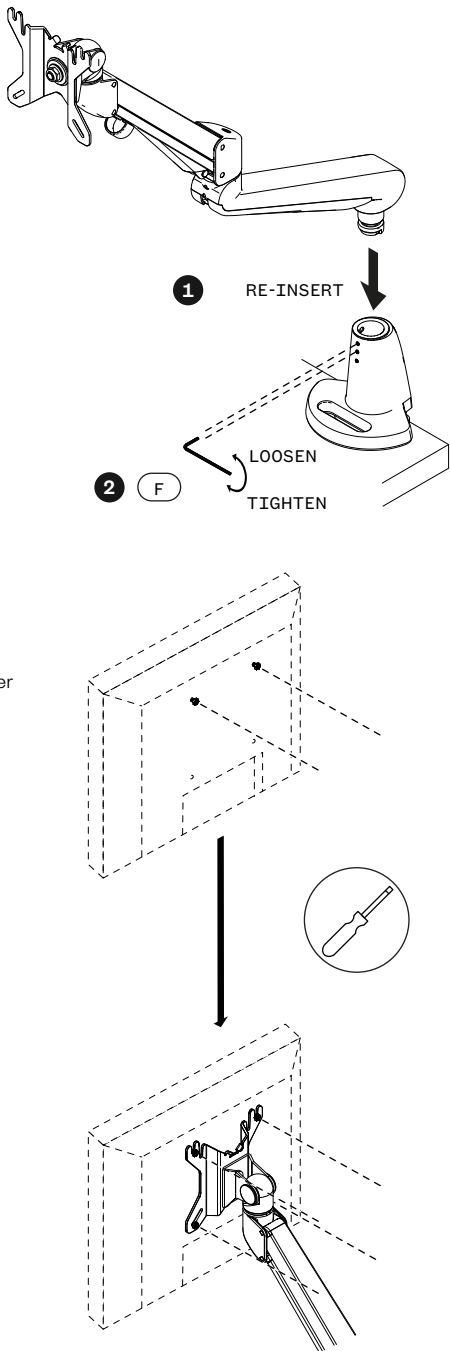


STEP 4B


If spacers are needed:

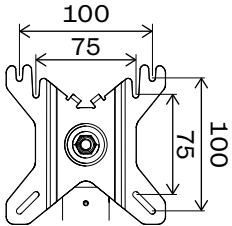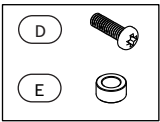


1 Attach all spacers (E) with the screws (D) to the VESA bracket

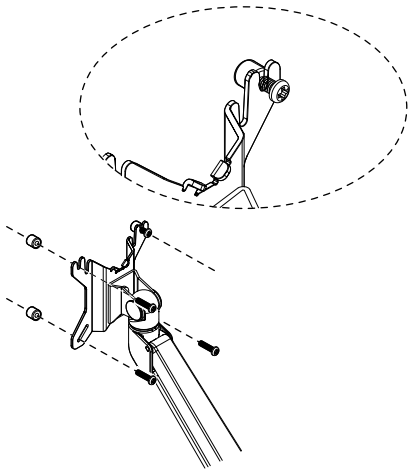

2 Hold the monitor and fasten all four screws.

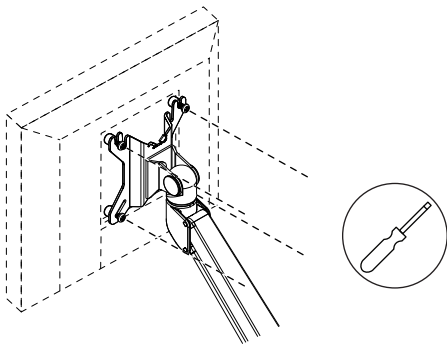

TENSION ADJUSTMENTS AND ROTATION LOCK

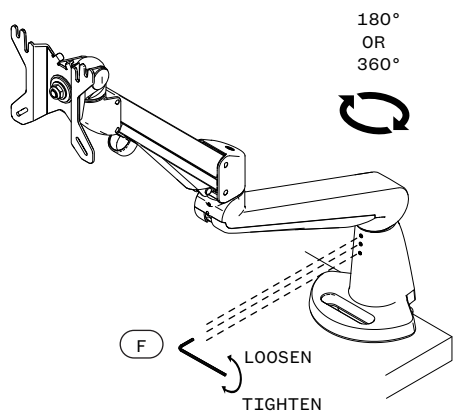


Adjust the tension of the rotation to your need by tighten or loosen the top screw.

To keep the arms completely rigid, fasten the the top screw as tight as possible while maintaining the intended position.


Fasten and loosen the middle screw one revolution to prevent the monitor arm from being removed.

To limit the rotational movements to 180°: Fasten the bottom screw and loosen one revolution.

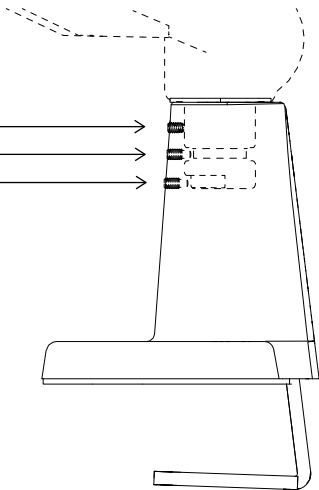

STEP 5

Unattach the cable collector and route the cables through. Once satisfied, re-attach the collector back into place. Proceed by continuing the routing through the cable clip.

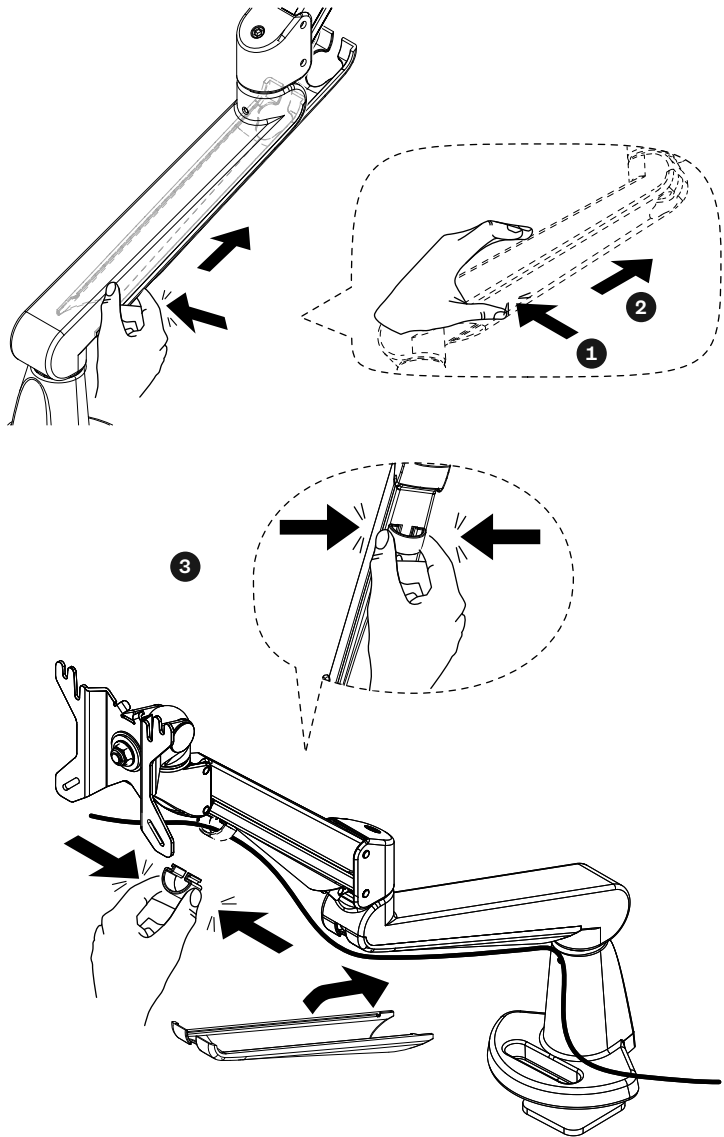

TENSION ADJUSTMENTS

CAUTION:
Support and hold on to the arm while adjusting the tension.

ADJUSTMENT:
Use the Allen key provided to adjust the tension to correspond to the weight of the desired monitor. Turn the Allen key counter-clockwise to adjust for heavier monitors; clockwise for lighter monitors. Once the adjustment is done, the monitor should be experienced as weightless and the monitor should remain in any position without dropping nor rising.

RECOMMENDATIONS:

- 8-14 kg (17.6-30.8 lbs).
- The products loading capacities are based on monitors' center of gravity less than 3 cm from the end of the VESA interface.
- Loading capacity could be reduced if the monitor size is greater than 26 inches or if the thickness exceeds 5.5 cm.
- All product specifications in catalogues are subject to change without notice.

